ORDER NO. AD8905153C8

Service Manual

Stereo Integrated Amplifier

Amplifier

SU-V660

Color

(K)...Black Type

Area

Country Code	Area	Color
(E) (E5)	Continental Europe	(K)
(EB)	Great Britain	(K)
(EG)	F.R. Germany & Italy	(K)
(GC)	Saudi Arabia	(K)
(GN)	Oceania	(K)

SPECIFICATIONS

(DIN 45 500)

■ AMPLIFIER SECTION

20 Hz~20 kHz continuous power output
both channels driven 2 × 90 W (8 Ω)
1 kHz continuous power output
both channels driven (THD: 1 %) 2 × 100 W (8 Ω)
2 × 140 W (4 Ω)
63 Hz~12.5 kHz continuous power output
both channels driven (0.7 %) 2 × 90 W (8 Ω)
2 × 125 W (4 Ω)
Total harmonic distortion (Power Amp Direct input)
rated power at 20 Hz~20 kHz 0.005 % (8 Ω)
rated power at 1 kHz 0.0009 % (8 Ω)
0.002 % (4 Ω)
half power at 20 Hz~20 kHz 0.005 % (8 Ω)
half power at 1 kHz 0.0009 % (8 Ω)
0.002 % (4 Ω)
Intermodulation distortion
rated power at 50 Hz: 7 kHz = 4:1, SMPTE, 8 Ω 0.007 %
Residual hum and noise 0.2 mV
Damping factor 60 (8 Ω), 30 (4 Ω)
Headphones output level and impedance 635 mV/330 Ω
Load impedance
A or B 4 Ω~16 Ω
A and B 8 Ω~16 Ω
Input sensitivity and impedance
PHONO MM 2.5 mV/47 kΩ
PHONO MC 170 μV/220 Ω
TUNER, CD, AUX, TAPE 1, TAPE 2/DAT 150 mV/22 kΩ
POWER AMP DIRECT 1 V/18 kΩ
Phono maximum input voltage (IHF '66, 1 kHz, RMS)
MM 170 mV
MC 12 mV
S/N
rated power (4 Ω)
PHONO MM 79 dB (IHF '66: 86 dB)
PHONO MC 67 dB (IHF '66: 68 dB, 250 μV)
TUNER, CD, AUX, TAPE 1, TAPE 2/DAT
97 dB (IHF '66: 100 dB)
POWER AMP DIRECT 106 dB (IHF '66: 115 dB)
−26 dB power (4 Ω)
PHONO MM 77 dB
PHONO MC 67 dB
TUNER, CD, AUX, TAPE 1, TAPE 2/DAT 84 dB
50 mW power (4 Ω)
PHONO MM 75 dB
PHONO MC 67 dB
TUNER, CD, AUX, TAPE 1, TAPE 2/DAT 78 dB
Frequency response
PHONO RIAA standard curve
±0.8 dB (30 Hz~15 kHz)
TUNER, CD, AUX, TAPE 1, TAPE 2/DAT
3 Hz~100 kHz (−3 dB)
+0 dB, −0.2 dB (20 Hz~20 kHz)
POWER AMP DIRECT 2 Hz~120 kHz (−3 dB)
+0 dB, −0.2 dB (20 Hz~20 kHz)
Tone controls
BASS 50 Hz, +10 dB, −10 dB
TREBLE 20 kHz, +10 dB, −10 dB
Loudness control (volume at −30 dB) 50 Hz, +9 dB
Output voltage
TAPE 1, TAPE 2/DAT, REC OUT 150 mV
Channel balance, AUX 250 Hz~6,300 Hz ±1 dB
Channel separation, AUX 1 kHz 50 dB

■ GENERAL

Power consumption 690 W
Power supply
For Great Britain and Oceania AC 50 Hz/60 Hz, 240 V
For Continental Europe AC 50 Hz/60 Hz, 220 V
For others AC 50 Hz/60 Hz, 110 V/127 V/220 V/240 V
Dimensions (W × H × D) 430 × 158 × 370 mm
(16-15/16" × 6-7/32" × 14-9/16")
Weight 11.5 kg (25.4 lb.)

Notes:

1. Specifications are subject to change without notice. Weight and dimensions are approximate.
2. Total harmonic distortion is measured by the digital spectrum analyzer.

Technics

Matsushita Electric Industrial Co., Ltd.
Central P.O. Box 288, Osaka 530-91, Japan

SU-V660

■ CONTENTS

	Page
BEFORE REPAIR AND ADJUSTMENT	2
PROTECTION CIRCUITRY	2
ACCESSORIES	2
LOCATION OF CONTROLS	3
DISASSEMBLY INSTRUCTIONS	4~7
BLOCK DIAGRAM	8~9
WIRING CONNECTION DIAGRAM	10
PRINTED CIRCUIT BOARDS	11~14
SCHEMATIC DIAGRAM	15~17
MEASUREMENTS AND ADJUSTMENTS	18
TERMINAL GUIDE OF IC'S, TRANSISTORS AND DIODES	18
REPLACEMENT PARTS LIST	19~22
EXPLODED VIEW	23~24

■ BEFORE REPAIR AND ADJUSTMENT

(1) Turn off the power supply. Using a 10Ω, 10W resistor, shortcircuit both ends of power supply capacitors (C705,C706)in order to discharge the voltage.

(2) Before turning on the power switch of the unit.

A. Connect the voltage controller to the primary side.

B. Connect the AC ampere meter to the primary side or connect the DC voltage meter to the "±B" circuit of the secondary side.

C. Turn the VR of ICQ (VR451 and VR452) to minimum (counterclockwise).

D. After setting the output to zero of the voltage contoller,turn on the power switch of the unit. And increase the output of voltage controller gradually. Then, check carefully whether the current value of primary side become more than following value or whether the DC voltage of secondary side is increasing slowly.

E. If the value of current is increasing unusually or the DC voltage is not increasing,lower the output level of voltage contoller immediately.

- The current value of the primary side at no signal. (Confirm the power supply voltage of each area and provided voltage of the unit.)

Power supply voltage		AC 110 V	AC 120 V	AC 220 V	AC 240 V
Consumed current	50 Hz	200~600 mA	180~550 mA	120~360 mA	100~300 mA
	60 Hz	180~550 mA	160~530 mA	110~330 mA	90~280 mA

■ PROTECTION CIRCUITRY

The protection circuitry of the amplifier may have operated if either of the following conditions is noticed:

- No sound is heard when the power is turned on.
- Sound stops during a performance.

The function of this circuitry is to prevent circuitry damage if, for example, the positive and negative speaker connection wires are "shorted" , or if speaker systems with an impedance less than the indicated rated impedance of the amplifier are used.

If this occurs, follow the procedure outlined below:

1.Turn off the power.

2.Determine the cause of the problem and correct it.

3.Turn on the power once again.

Note:

When the protection circuitry functions, the unit will not operate unless the power is first turned off and then on again.

■ ACCESSORIES

- AC power supply cord 1
  - (SFDAC05E03) ..... For (E), (E5) and (EG) areas.
  - (SJA193) ..... For (EB) area only.
  - (RJA0004) ..... For (GC) area only.
  - (SJA173) ..... For (GN) area only.
- AC plug adaptor 1
  - (SJP9215) ..... For (GC) area only.

■ LOCATION OF CONTROLS

•Front Panel

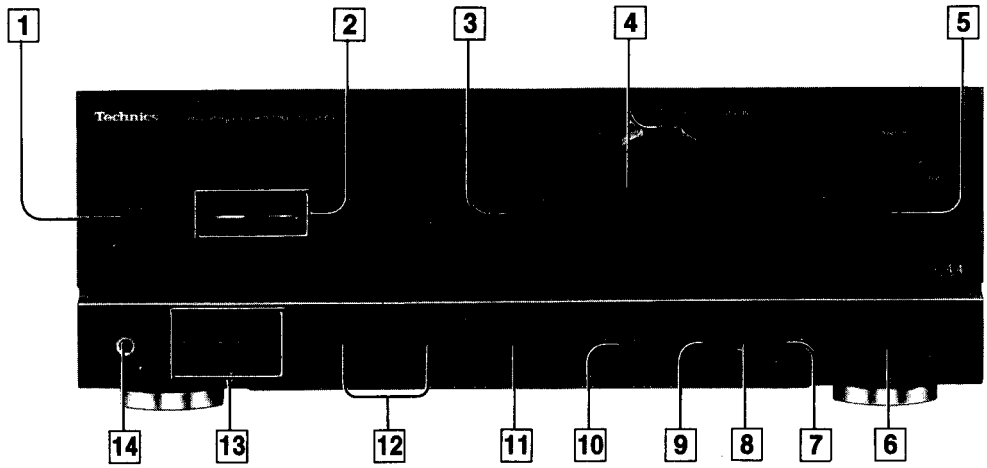

1 Power switch (power)
2 Operation indicators (amplifier operation monitor)
3 Power amplifier direct switch (power amp direct)
4 Volume control/indicator (volume)
5 Input selector (input selector)
6 Recording output selector (rec selector)
7 Phono cartridge selector (phono selector)
8 Mode selector (mode)
9 Loudness switch (loudness)
10 Tone control switch (tone control)
11 Balance control (balance)
12 Tone controls (bass/treble)
13 Speaker selectors (speakers)
14 Headphones jack (phones)

•Rear Panel

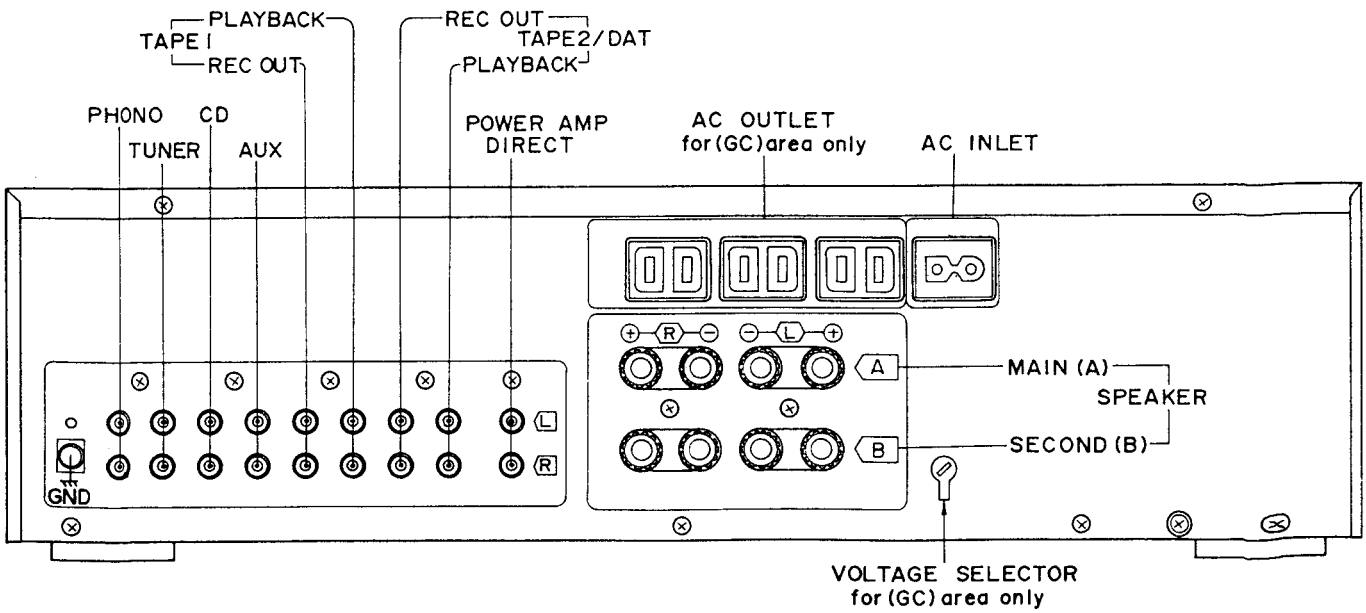

*Phono input capacitance is about 270 pF for EG area (about 100 pF for other areas).

■ LOCATION OF CONTROLS

●Front Panel

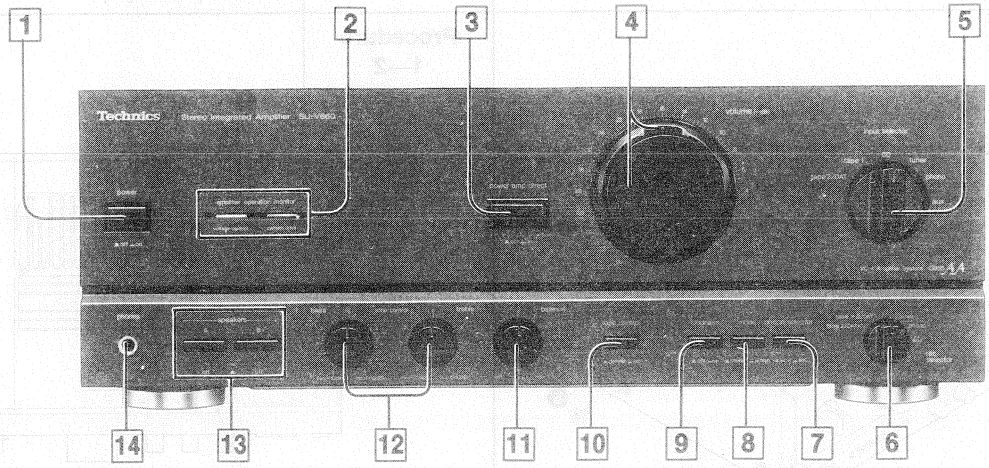

1 Power switch (power)
2 Operation indicators (amplifier operation monitor)
3 Power amplifier direct switch (power amp direct)
4 Volume control/indicator (volume)
5 Input selector (input selector)
6 Recording output selector (rec selector)
7 Phono cartridge selector (phono selector)
8 Mode selector (mode)
9 Loudness switch (loudness)
10 Tone control switch (tone control)
11 Balance control (balance)
12 Tone controls (bass/treble)
13 Speaker selectors (speakers)
14 Headphones jack (phones)

●Rear Panel

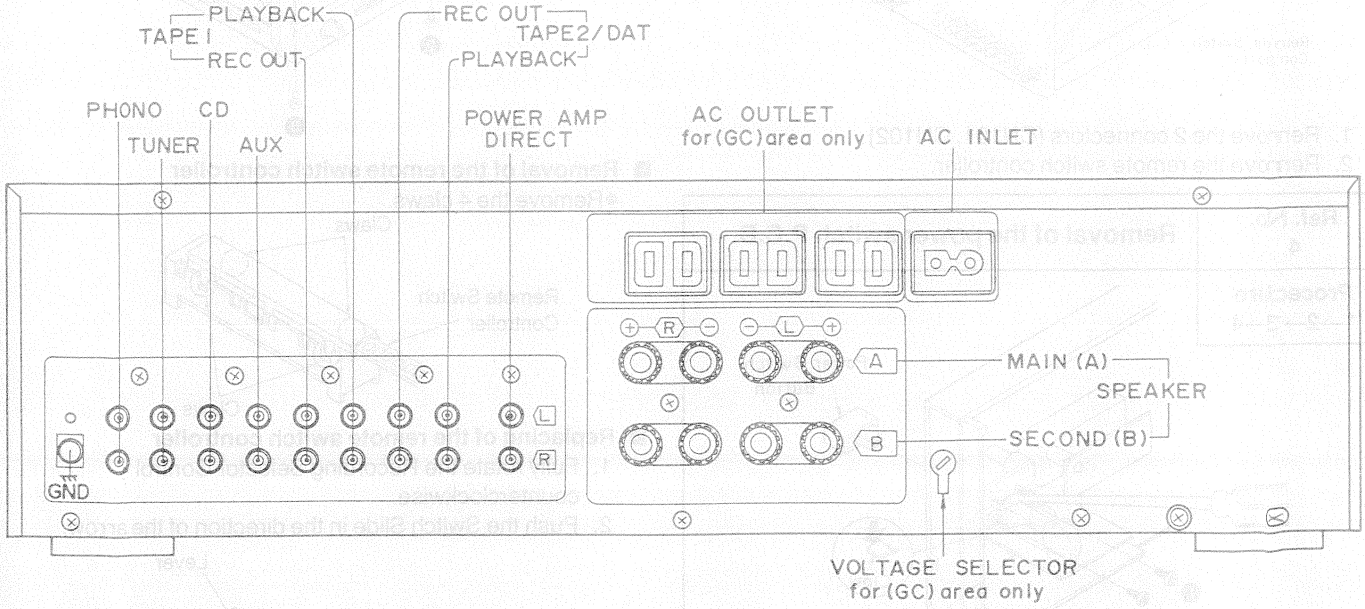

*Phono input capacitance is about 270 pF for EG area (about 100 pF for other areas).

■ DISASSEMBLY INSTRUCTIONS

Ref. No. 1	Removal of the cabinet
Procedure 1	

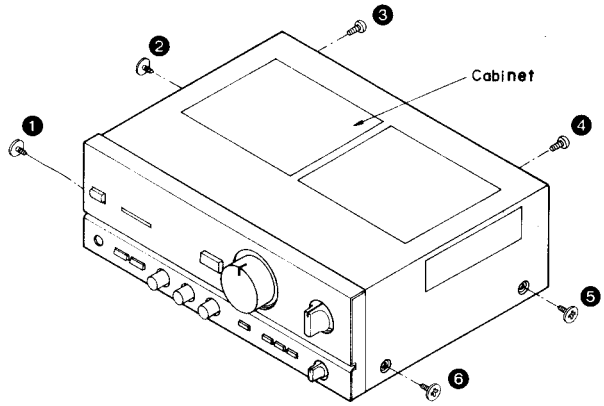

●Remove the 6 screws (❶~❻).

Ref. No. 2	Removal of the shield plate (L) and shield plate (R)
Procedure 1→2	

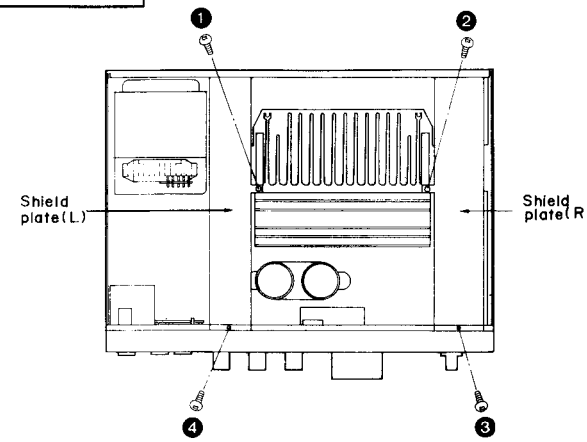

●Remove the 4 screws (❶~❹).

Ref. No. 3	Removal of the front panel
Procedure 1→2→3	

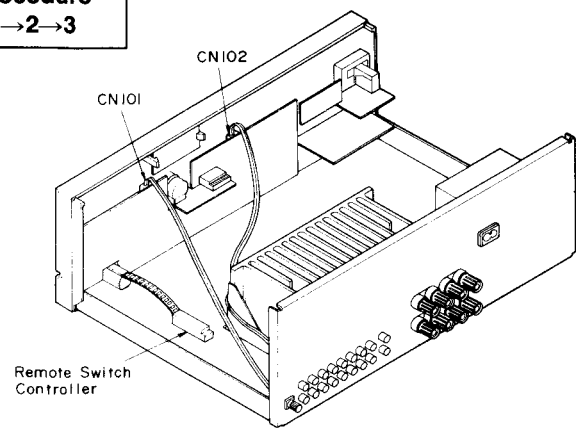

1. Remove the 2 connectors (CN101, CN102).
2. Remove the remote switch controller.
3. Remove the 3 screws (❶~❸).
4. Remove the front panel in the direction of the arrow.

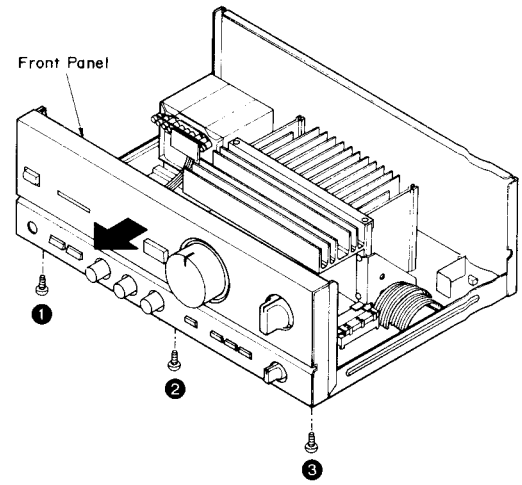

Ref. No. 4	Removal of the power switch P.C.B.
Procedure 1→2→3→4	

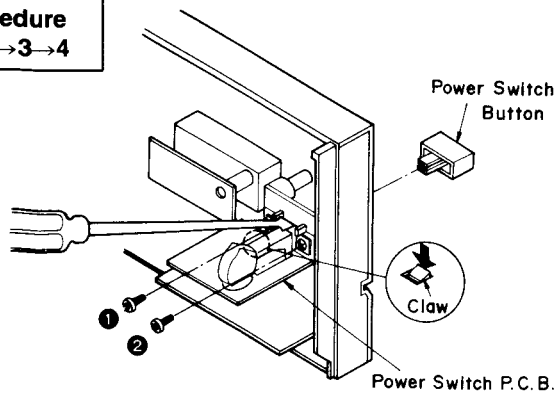

1. Remove the 2 screws (❶, ❷).
2. Remove the power switch button by pushing it from behind the front panel.
3. Release the 1 claw.

■ Removal of the remote switch controller

●Remove the 4 claws.

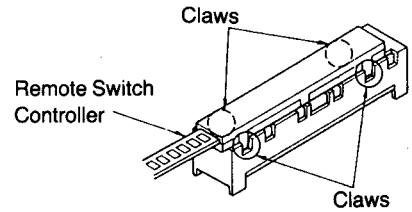

■ Replacing of the remote switch controller

1. Fully rotate the Recording Selector Control counterclockwise.
2. Push the Switch Slide in the direction of the arrow.

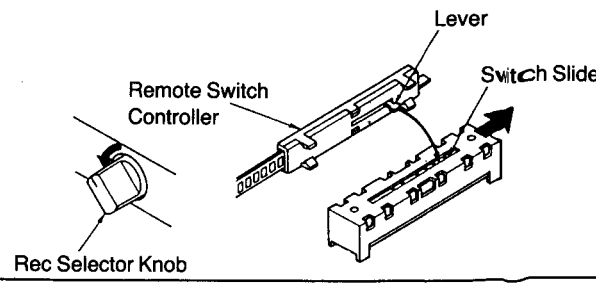

Ref. No. 5 — Removal of the LED P.C.B. and headphones P.C.B.

Procedure 1→2→3→5

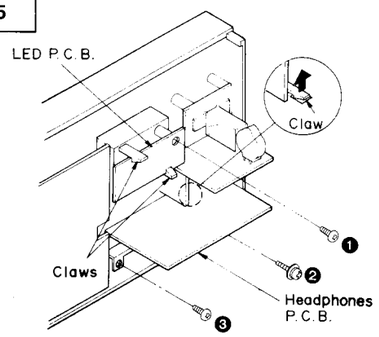

Removal of the LED P.C.B.
1. Remove the 1 screw (❶).
2. Release the 2 claws.

Removal of the headphones P.C.B.
1. Remove the 2 screws (❷, ❸).
2. Release the 1 claw.

Ref. No. 6 — Removal of the volume P.C.B.

Procedure 1→2→3→6

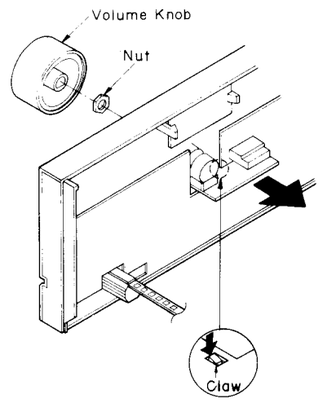

1. Pull out the volume knob.
2. Remove the nut.
3. Release the 1 claw.

Ref. No. 7 — Removal of the operation P.C.B.

Procedure 1→2→3→6→7

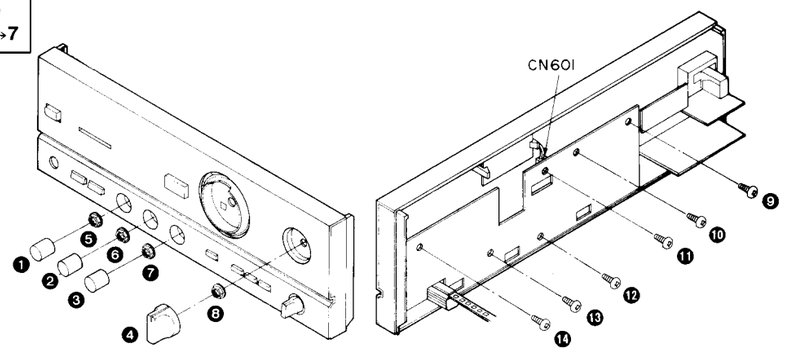

1. Pull out the 4 knobs (❶~❹).
2. Remove the 4 nuts (❺~❽).
3. Remove the 1 connector (CN601).
4. Remove the 6 screws (❾~⓮).

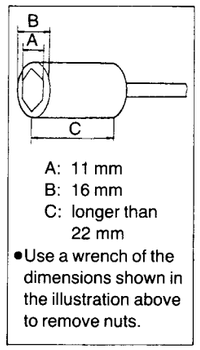

●Use a wrench of the dimensions shown in the illustration above to remove nuts.

Ref. No. 8 — Removal of the remote switch controller

Procedure 1→2→3→7

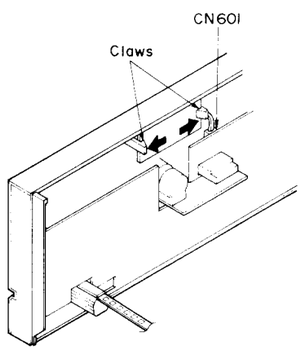

1. Remove the 1 connector (CN601).
2. Release the 2 claws.

Ref. No. 9 — Removal of the volume LED P.C.B.

Procedure 1→2→3→8

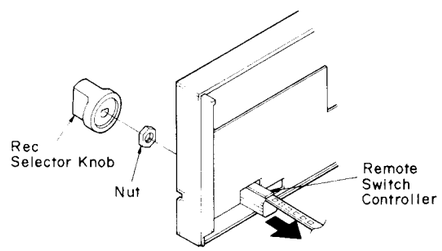

1. Pull out the rec selector knob.
2. Remove the nut.
3. Remove the remote switch controller in the direction of the arrow.

Ref. No. 10 — Checking of the main P.C.B.

Procedure 1→2→10

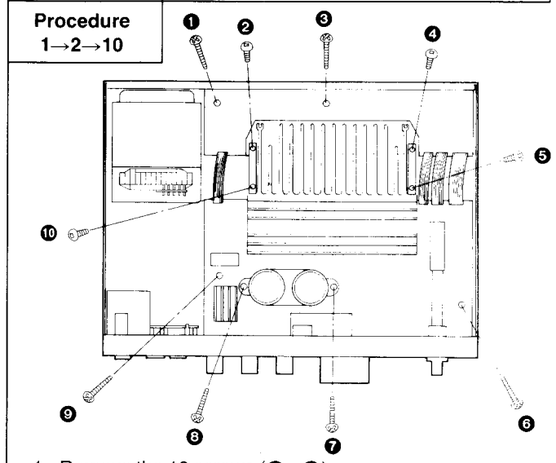

1. Remove the 10 screws (❶~❿).

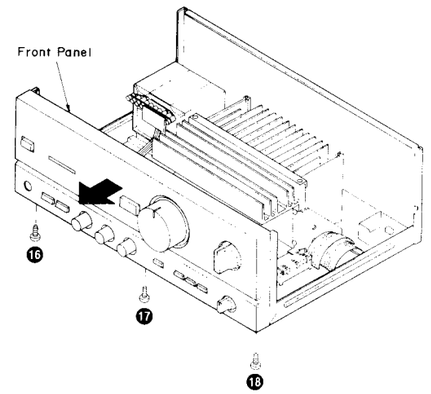

3. Remove the 3 screws (⓰~⓲).
4. Remove the front panel.

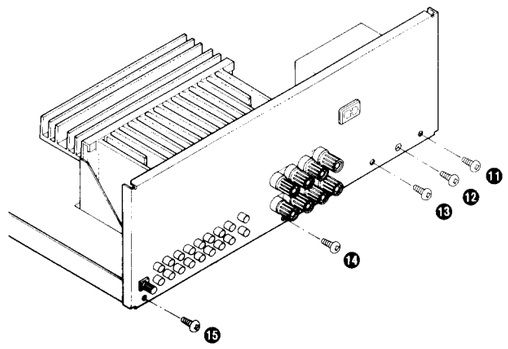

2. Remove the 5 screws (⓫~⓯).

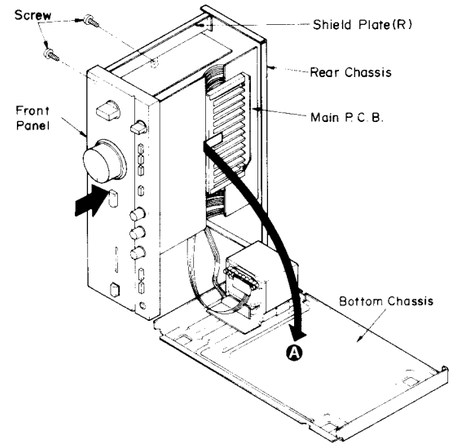

5. Remove the bottom chassis in the direction of the arrow Ⓐ.
6. Reinstall the front panel to the main P.C.B.
7. Insert the shield plate (R) in the unit between the front panel and rear chassis and then secure it with the screws.

Ref. No. 11 — Removal of the power IC

Procedure 1→2→10→11

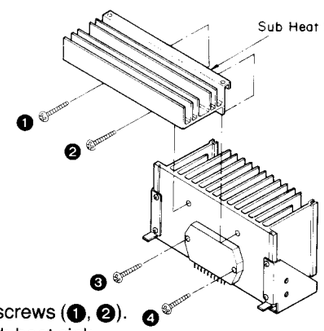

1. Remove the 2 screws (❶, ❷).
2. Remove the sub heat sink.
3. Unsolder the power IC.
4. Remove the 2 screws (❸, ❹).

●When mounting the power IC, apply silicon thermal compound (SZZ0L15 or equivalent) to the rear of the power IC.

Ref. No. 12 — Removal of the AC IN P.C.B.

Procedure 1→2→12

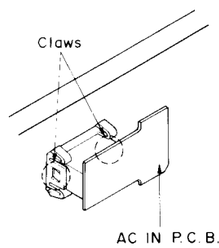

●Release the 2 claws.

Ref. No. 10	Checking of the main P.C.B.
Procedure 1→2→10	

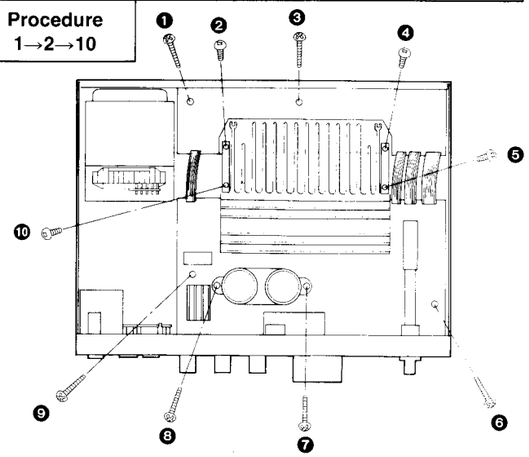

1. Remove the 10 screws (❶~❿).

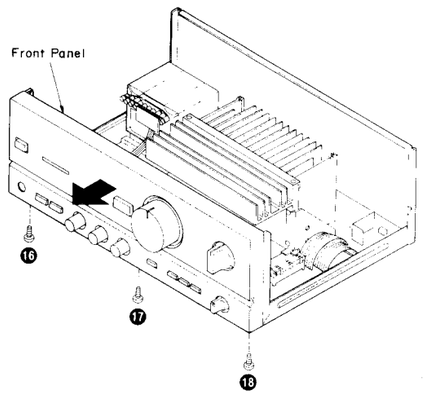

3. Remove the 3 screws (⓰~⓲).
4. Remove the front panel.

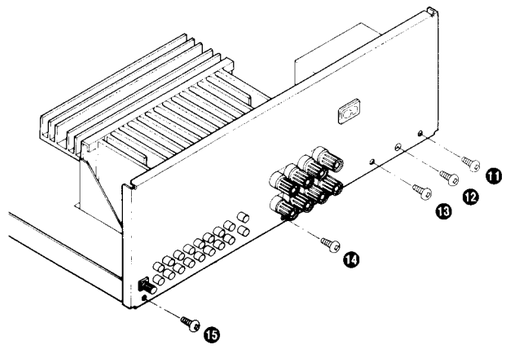

2. Remove the 5 screws (⓫~⓯).

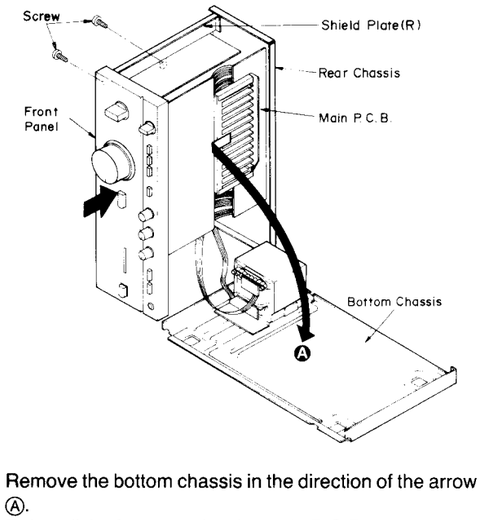

5. Remove the bottom chassis in the direction of the arrow Ⓐ.
6. Reinstall the front panel to the main P.C.B.
7. Insert the shield plate (R) in the unit between the front panel and rear chassis and then secure it with the screws.

Ref. No. 11	Removal of the power IC
Procedure 1→2→10→11	

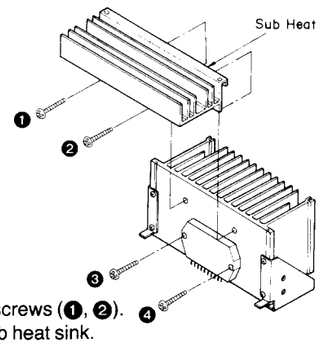

1. Remove the 2 screws (❶, ❷).
2. Remove the sub heat sink.
3. Unsolder the power IC.
4. Remove the 2 screws (❸, ❹).

●When mounting the power IC, apply silicon thermal compound (SZZ0L15 or equivalent) to the rear of the power IC.

Ref. No. 12	Removal of the AC IN P.C.B.
Procedure 1→2→12	

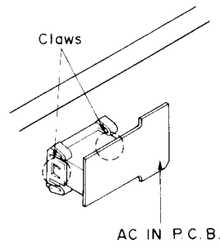

●Release the 2 claws.

Ref. No. 13	Removal of the power transformer
Procedure 1→13	

●Remove the 5 screws (❶~❺).

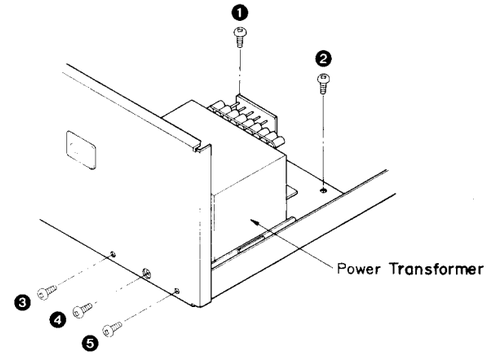

■ BLOCK DIAGRAM

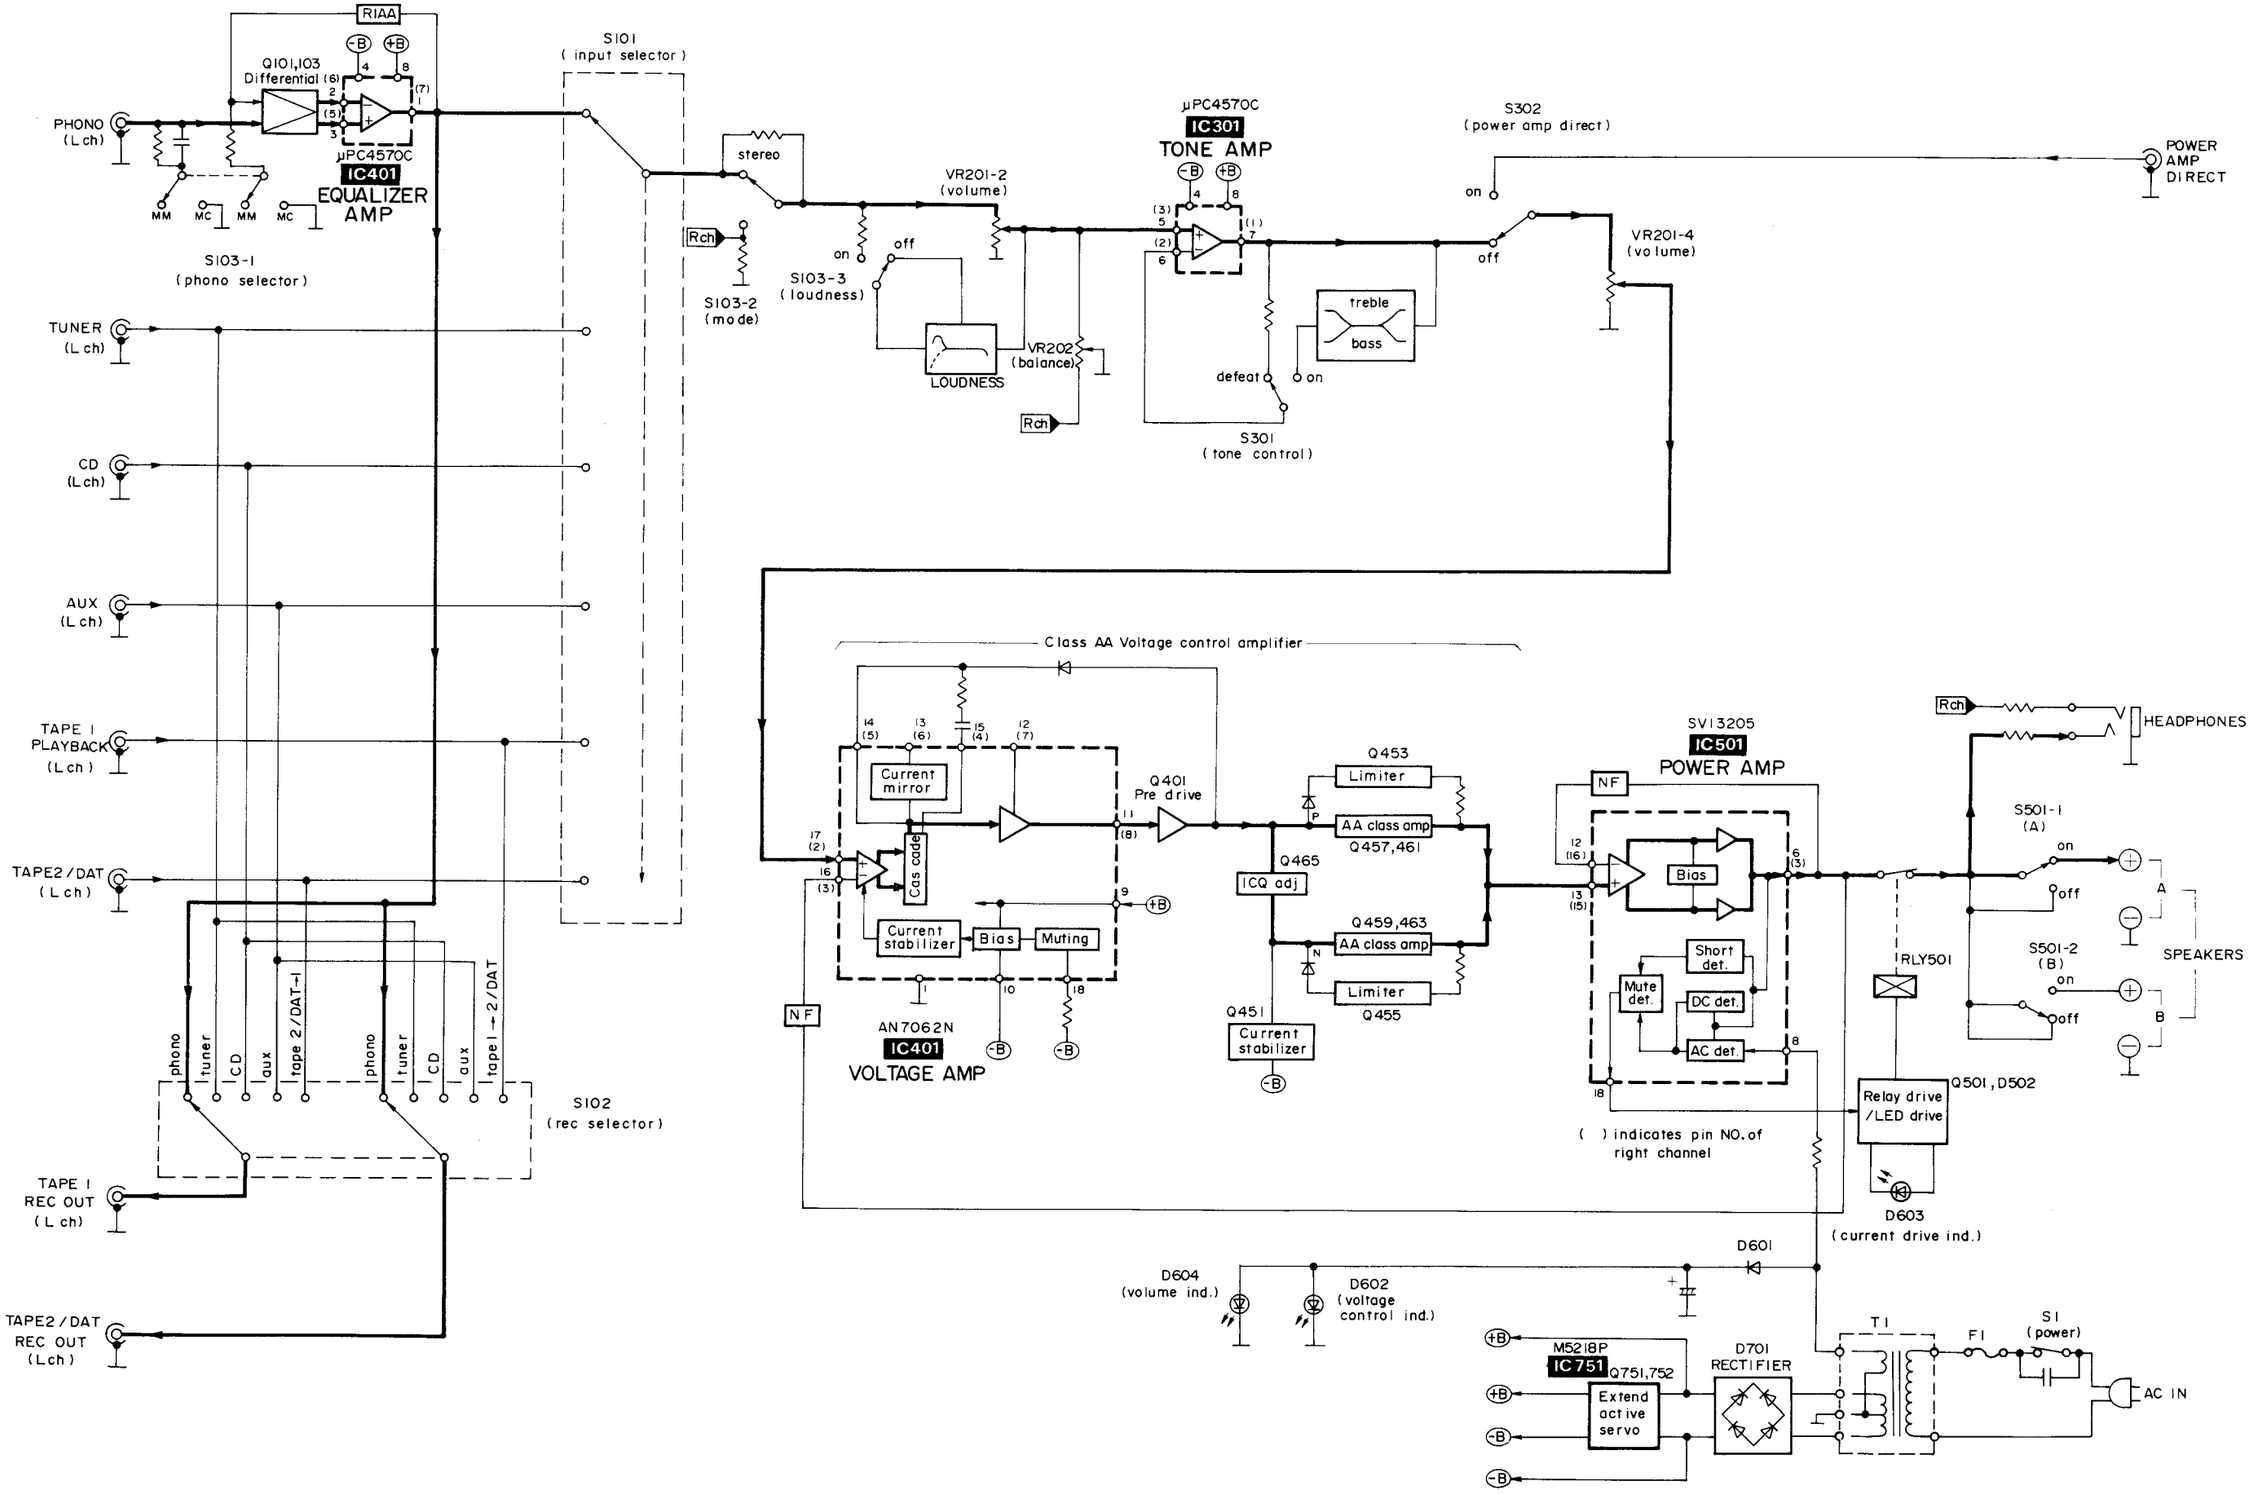

■ WIRI

■ WIRING CONNECTION DIAGRAM

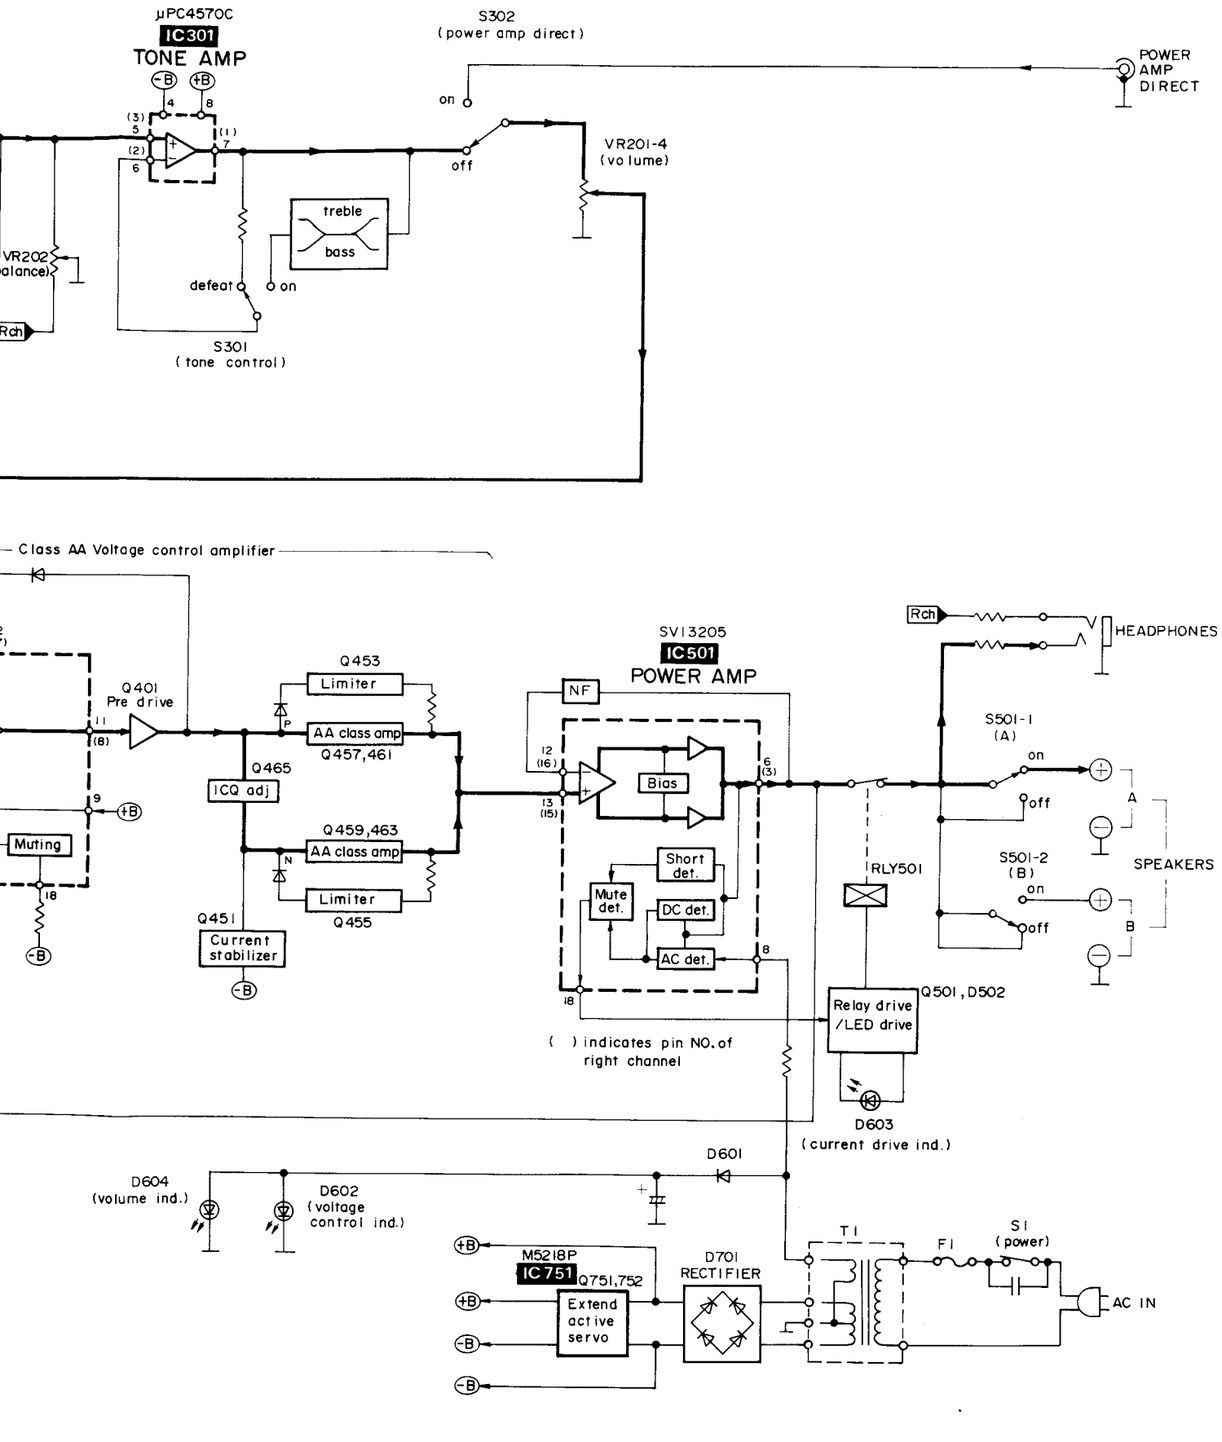

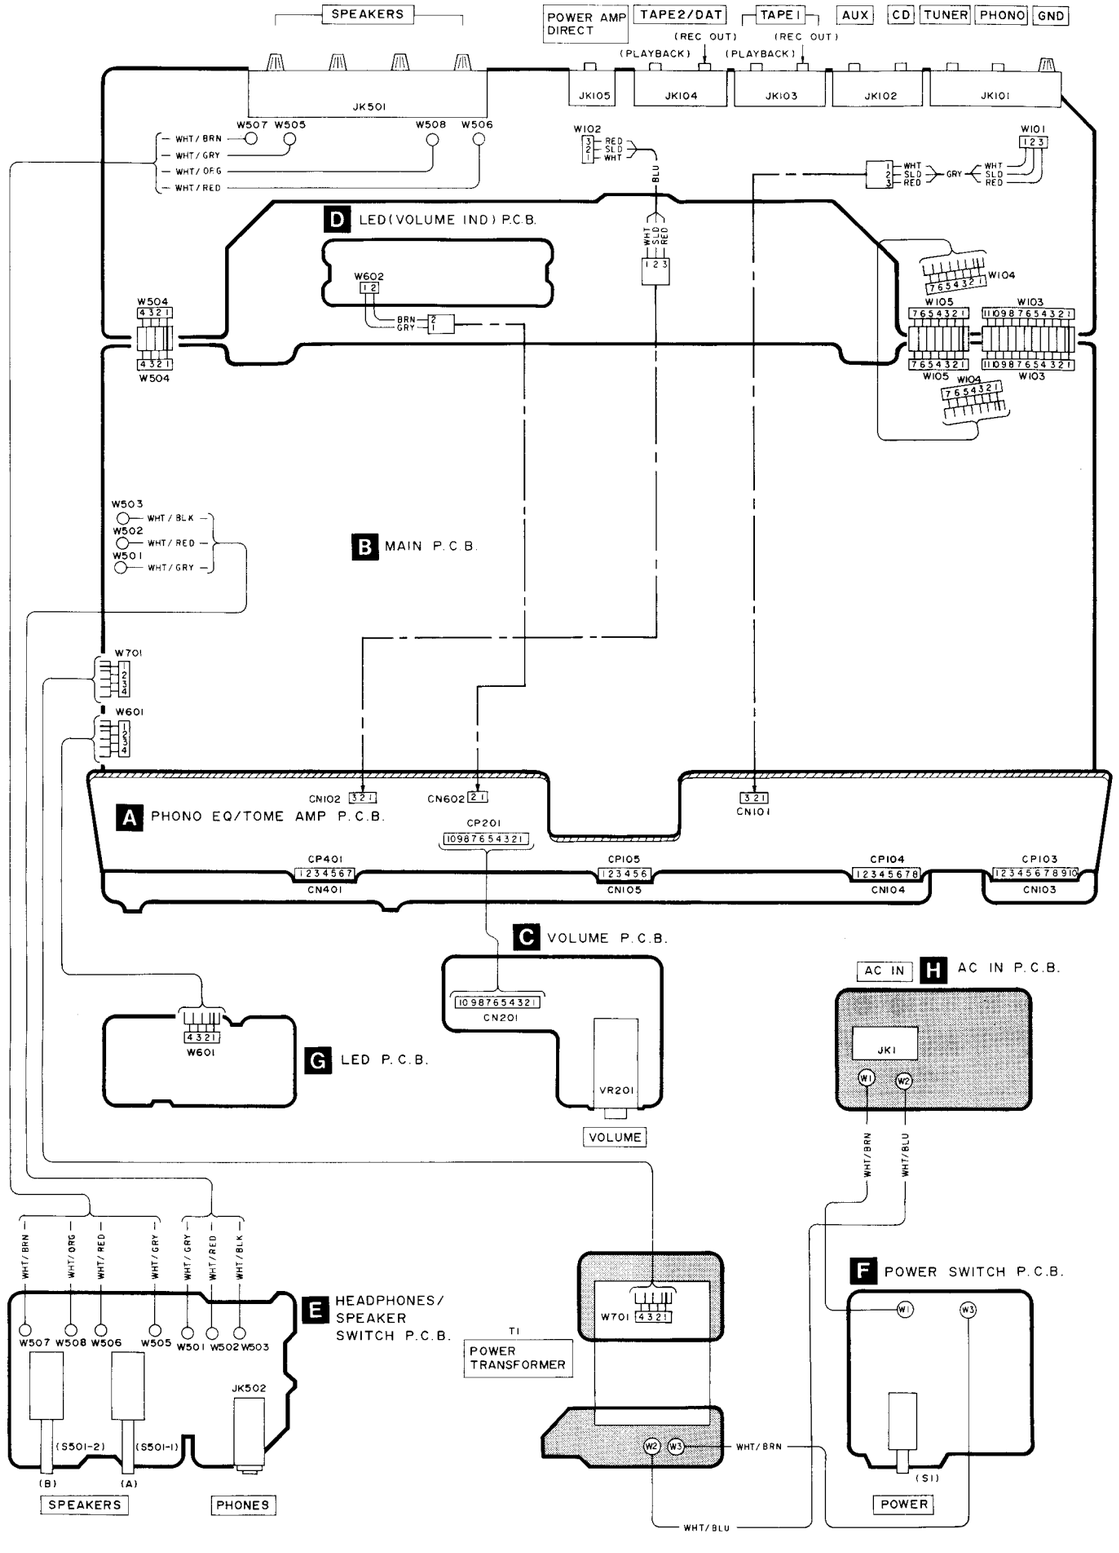

■ PRINTED CIRCUIT BOARDS

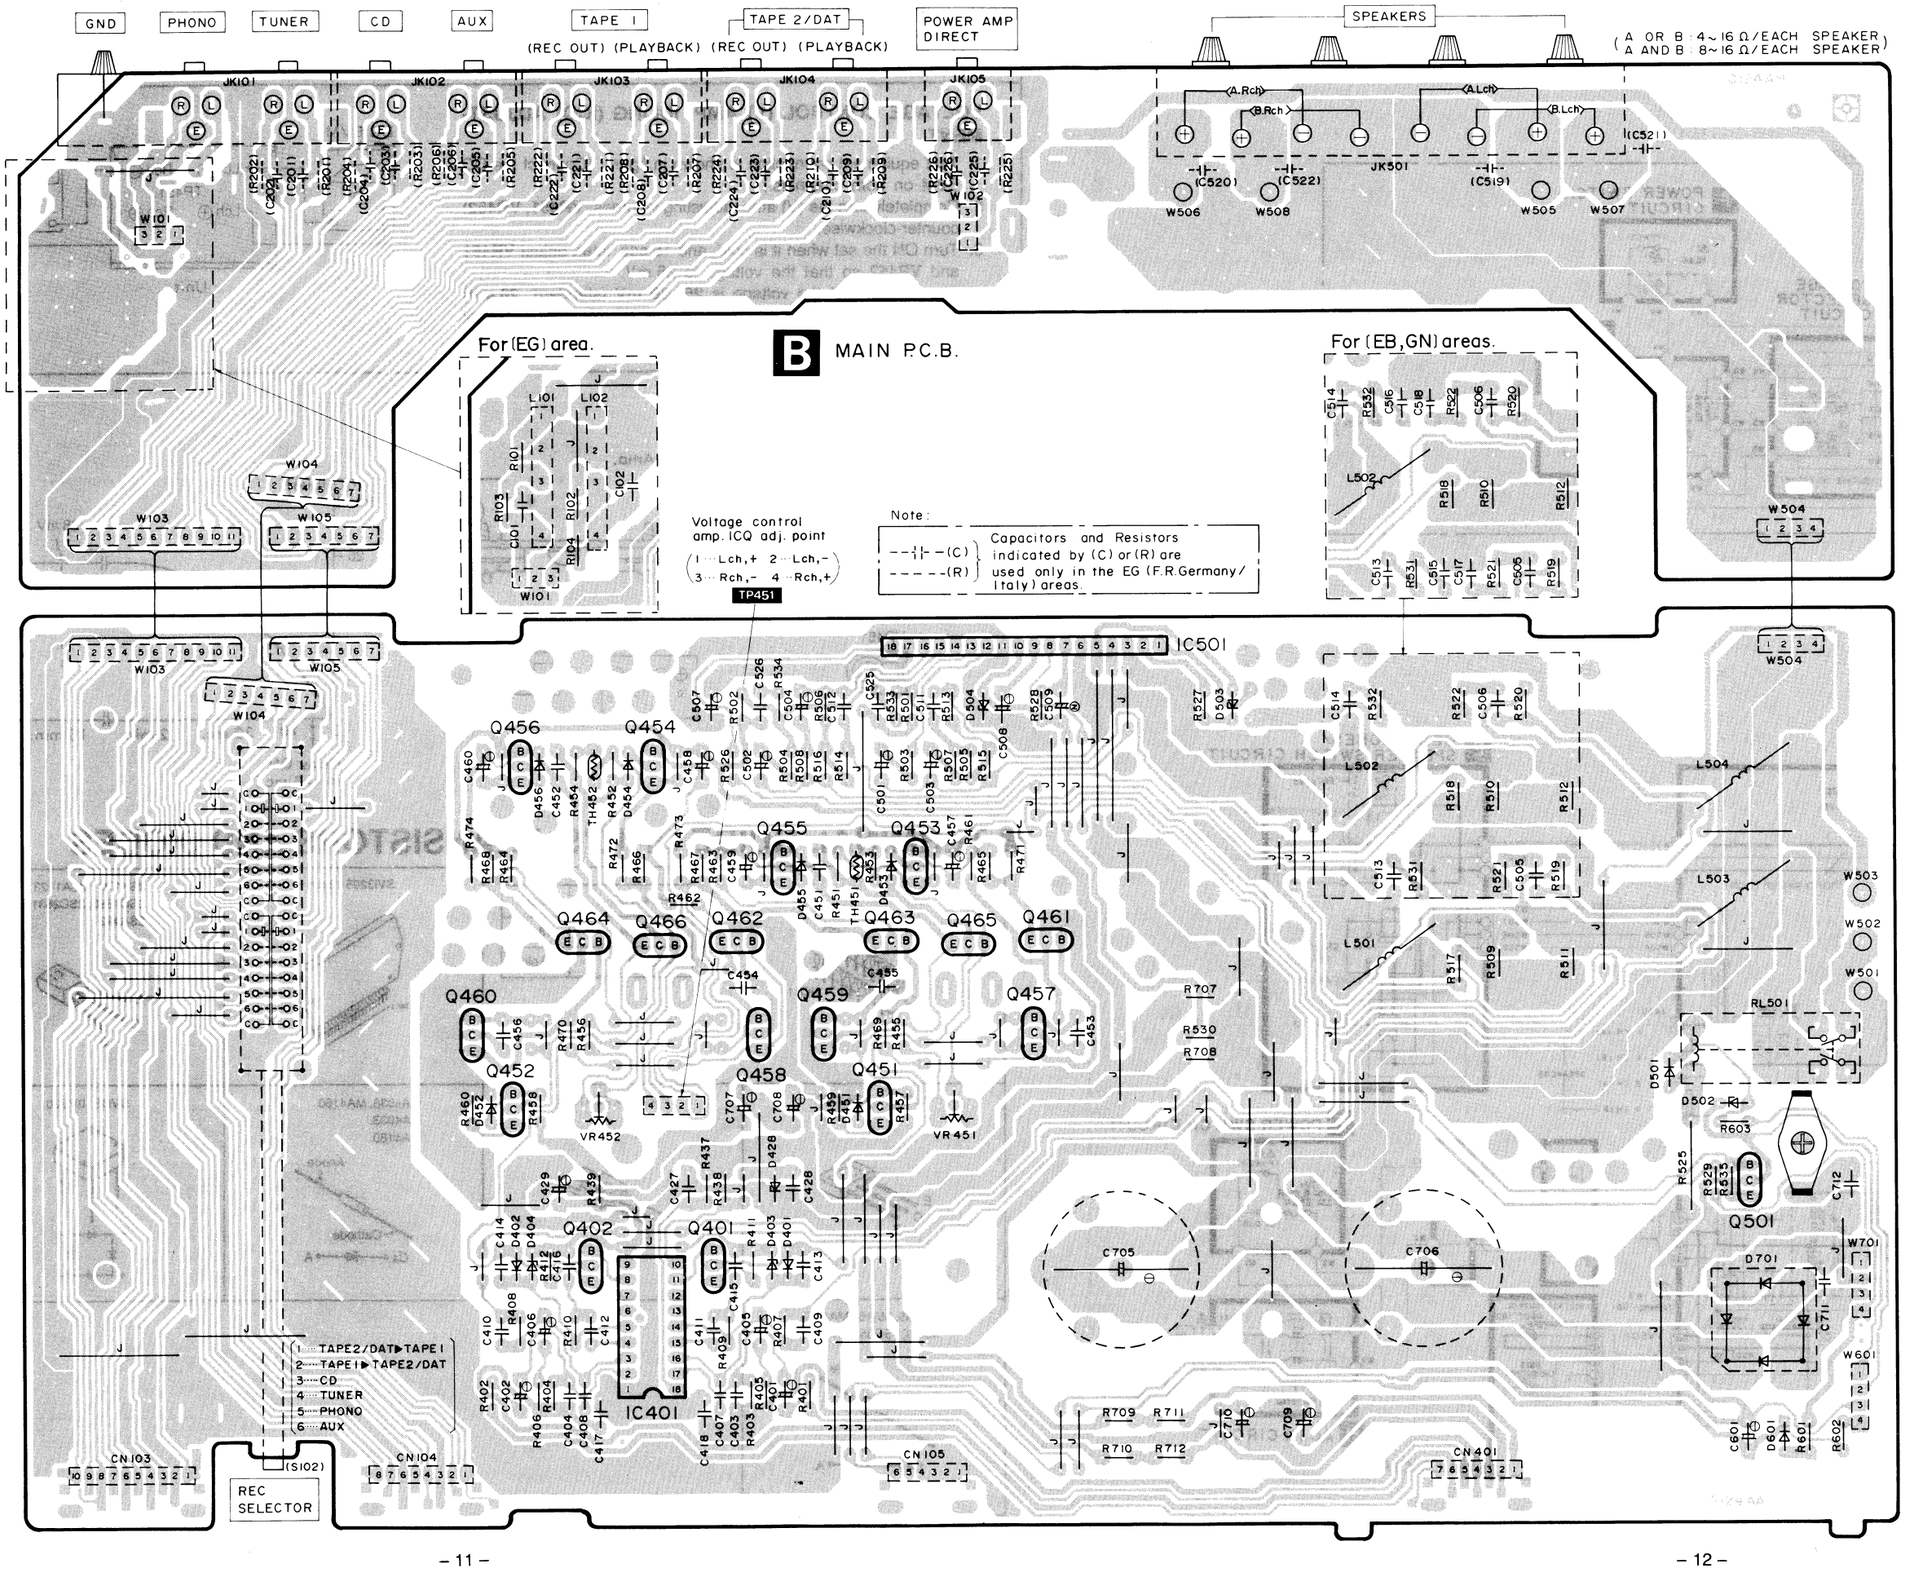

SPEAKERS

(A OR B : 4~16Ω/EACH SPEAKER)
(A AND B : 8~16Ω/EACH SPEAKER)

(A.Lch) (B.Lch)

JK501 (C521) (C519) W505 W507

r (EB,GN) areas.

W504 W504

L504 L503 W503 W502 W501

RL501 D501 D502 R603 Q501 C712 W701 D701 C711 W601

C706 CN401

0124AA

A PHONO EQ/TONE AMP P.C.B.

INPUT SELECTOR

1 ····TAPE 2/DAT
2 ····TAPE 1
3 ····CD
4 ····TUNER
5 ····PHONO
6 ····AUX

S101

Q101 Q102 Q103 Q104 (EG) area. (EG) area.

IC101 IC102

CP103 CP104 CP105 CP201 CP401

S103-1 S103-2 S103-3

PHONO SELECTOR MODE LOUDNESS

(S301) TONE CONTROL

POWER AMP DIRECT

CN101 CN102 CN602

S302

Q751 Q752 D753

IC751 IC301

VR202 BALANCE

VR302-1 VR302-2 VR301-1 VR301-2 TREBLE BASS

TONE CONTROL

G LED P.C.B.

W601

D603 D602

(Current drive Ind.) (Voltage control Ind.)

C VOLUME P.C.B.

TH202 TH201 CN201

VR201-1 VR201-2 VR201-3 VR201-4

VOLUME

AC IN
(220V~(E,E5,EG)
240V~(EB,GN)
50/60Hz)

(EG) area

JK1 L1

H AC IN P.C.B.

E HEADPHONES/SPEAKER SWITCH P.C.B.

W503 W502 W501 W505 W506 W508 W507

JK502 (C524) (C523) (EG) area.

PHONES (A) (S501-1) (B) (S501-2) SPEAKERS

F POWER SWITCH P.C.B.

F1 T2.5A ~(EB,GN)
F1 T3.15A ~(E,E5,EG)

(S1)

POWER

D LED (VOLUME IND.) P.C.B.

D604 W602

(Volume Ind.)

W701

T1
(Power transformer)

12 13 14 15 16 17 18 19 20 21

POWER AMP DIRECT

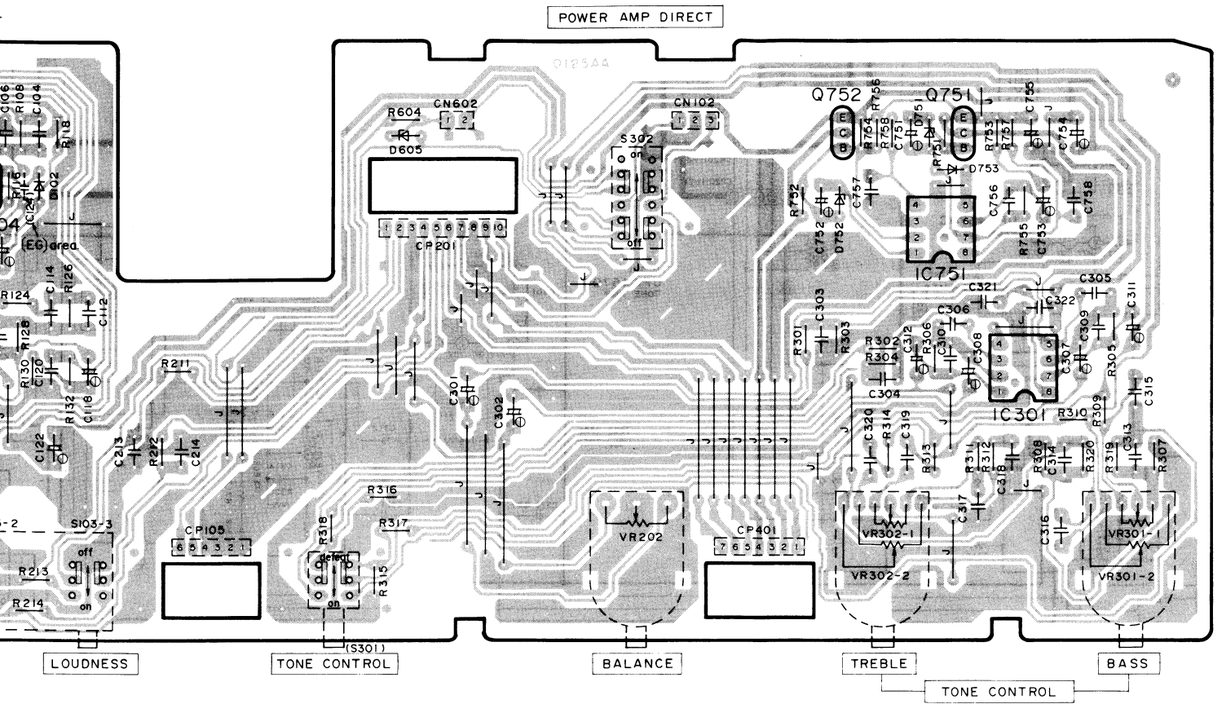

OLUME P.C.B.

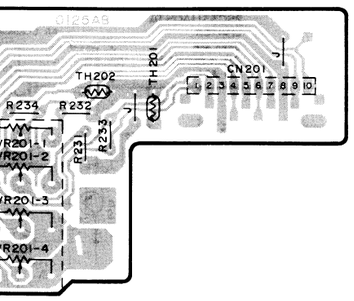

OLUME

AC IN
(220V···(E,E5,EG)
240V···(EB,GN)
50/60Hz

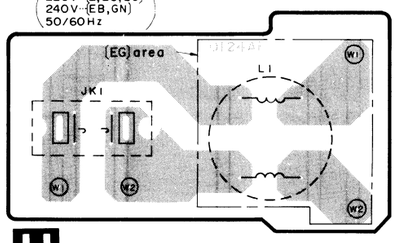

H AC IN P.C.B.

POWER SWITCH P.C.B.

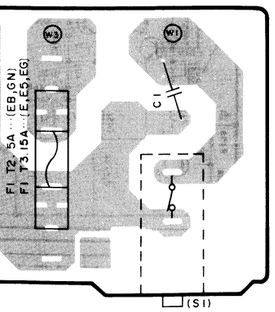

POWER

D LED (VOLUME IND.) P.C.B.

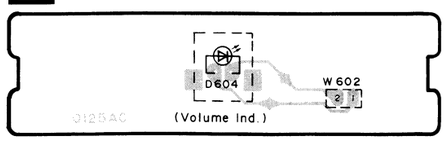

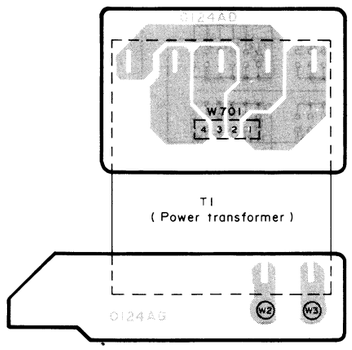

Power Source For(GC)area.

H AC IN/AC OUTLETS P.C.B.

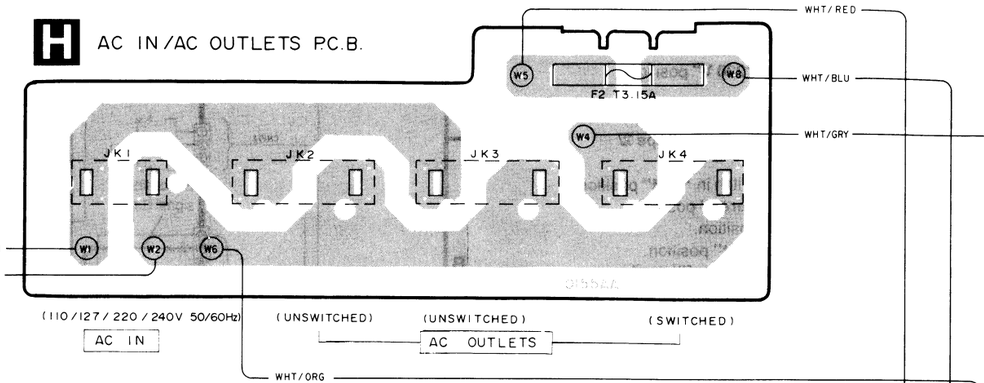

I VOLTAGE SELECTOR P.C.B.

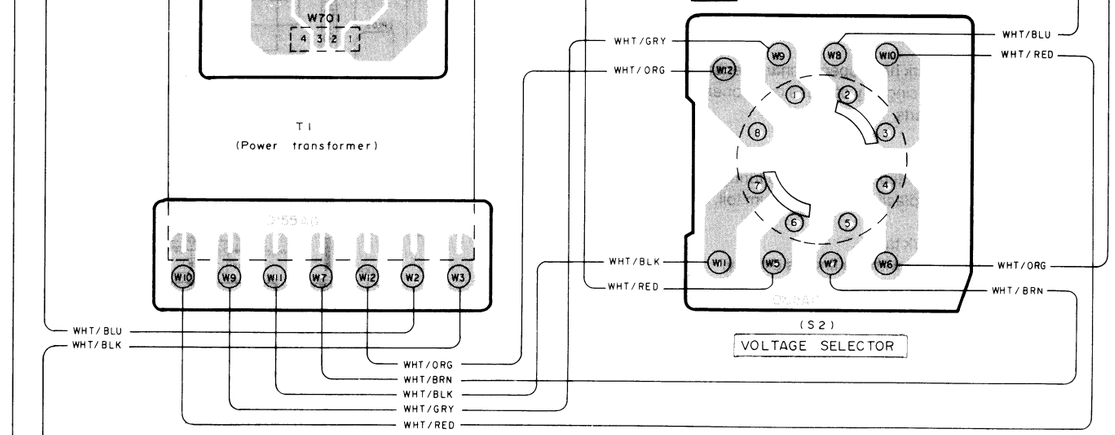

F POWER SWITCH P.C.B.

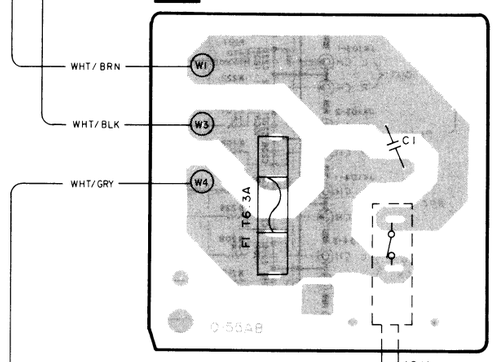

POWER

SU-V660 SU-V660

■ SCHEMATIC DIAGRAM

(Parts list on page 19~22)

(This schematic diagram may be modified at any time with the development of new technology.)

Notes:

- •S1 : Power switch in **"on"** position.
- •S2 : Voltage selector switch in **"220 V"** position. for (GC) area only.
- •S101 : Input selector switch in **"phono"** position.
- •S102 : Recording output selector switch in **"tape 2/ DAT►1"** position.
- •S103-1 : Phono cartridge selector switch in **"MM"** position.
- •S103-2 : Mode selector switch in **"stereo"** position.
- •S103-3 : Loudness switch in **"off"** position.
- •S301 : Tone control switch in **"defeat"** position.
- •S302 : Power amplifier direct switch in **"off"** position.
- •S501-1 : Speaker **(A)** selector switch in **"off"** position.
- •S501-2 : Speaker **(B)** selector switch in **"off"** position.
- —< >— : Positive voltage lines.
- ---< >--- : Negative voltage lines.
- : Phono Signal (Lch)
- : Recording Signal

•Indicated voltage values are the standard values for the unit measured by the DC electronic circuit tester (high-impedance) with the chassis taken as standard. Therefore, there may exist some errors in the voltage values, depending on the internal impedance of the DC circuit tester.

Important safety notice:

Components identified by ⚠ mark have special characteristics important for safety. When replacing any of these components, use only manufacturer's specified parts.

•Caution!

IC and LSI are sensitive to static electricity.

Secondary trouble can be prevented by taking care furing repair.

•Cover the parts boxes made of plastics with aluminum foil.

•Ground the soldering iron.

•Put a conductive mat on the work table.

•Do not touch the legs of IC or LSI with the fingers directly.

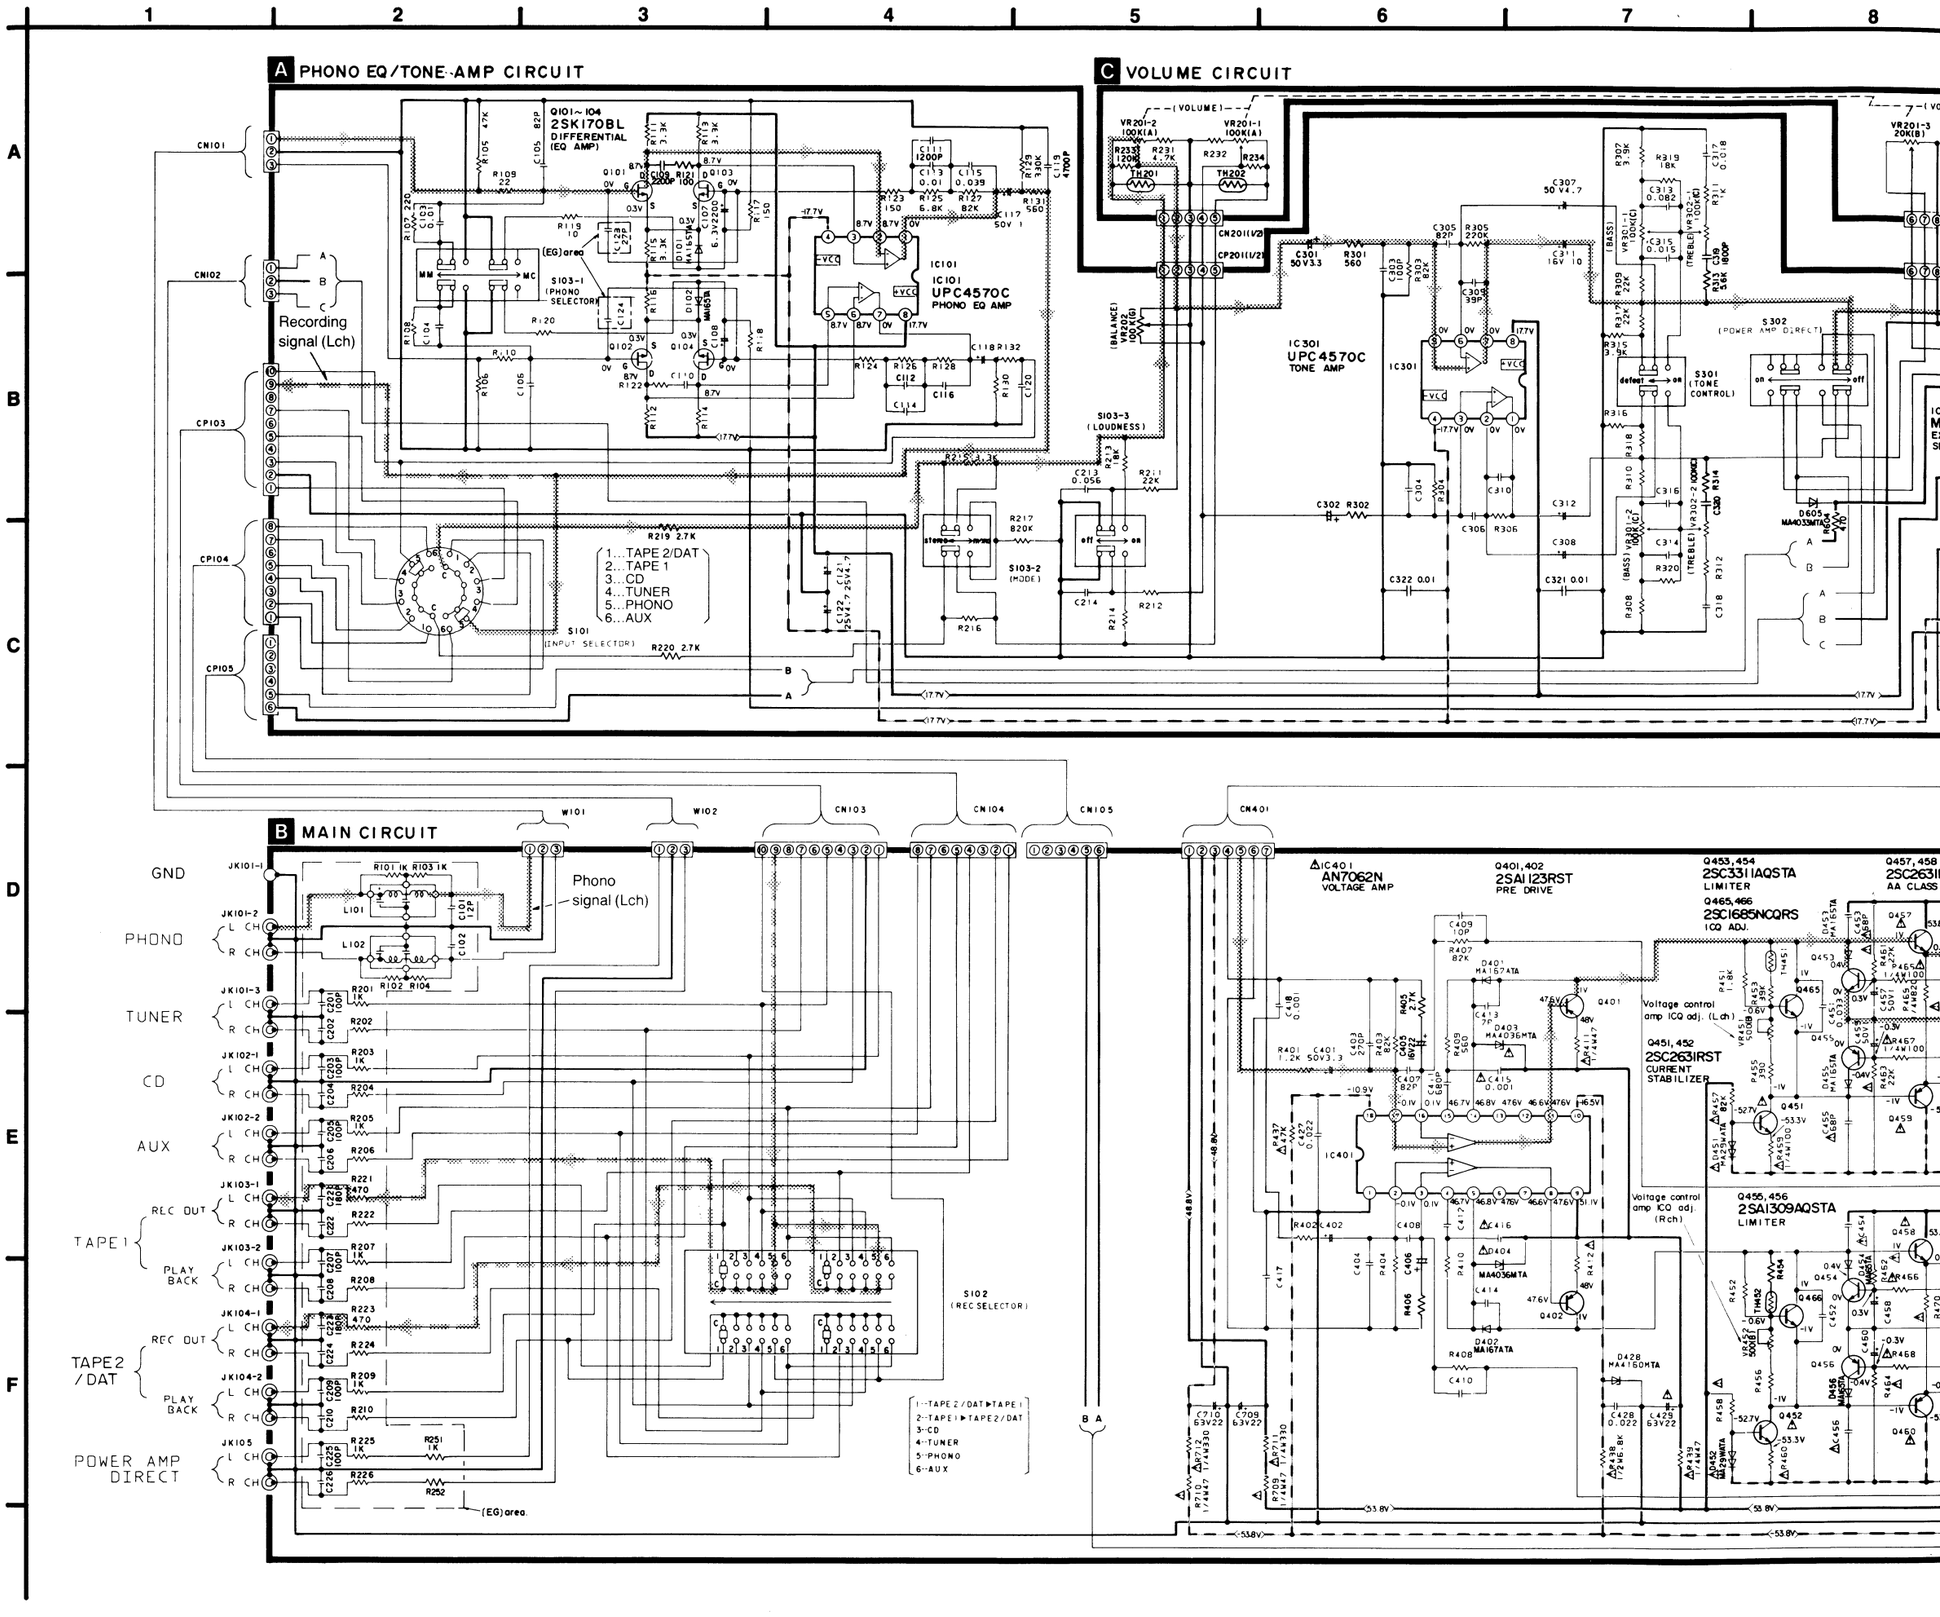

C VOLUME CIRCUIT

D LED (VOLUME IND.) CIRCUIT

F POWER SWITCH CIRCUIT

I VOLTAGE SELECTOR CIRCUIT

H AC IN/AC OUTLET CIRCUIT

Power Source For (GC)area.

E HEADPHONES/ SPEAKER SWITCH C

F POWE

G LED CIRCUIT

H AC IN

1--TAPE 2 / DAT▶TAPE 1
2--TAPE 1 ▶TAPE 2 / DAT
3--CD
4--TUNER
5--PHONO
6--AUX

Phono signal (Lch)

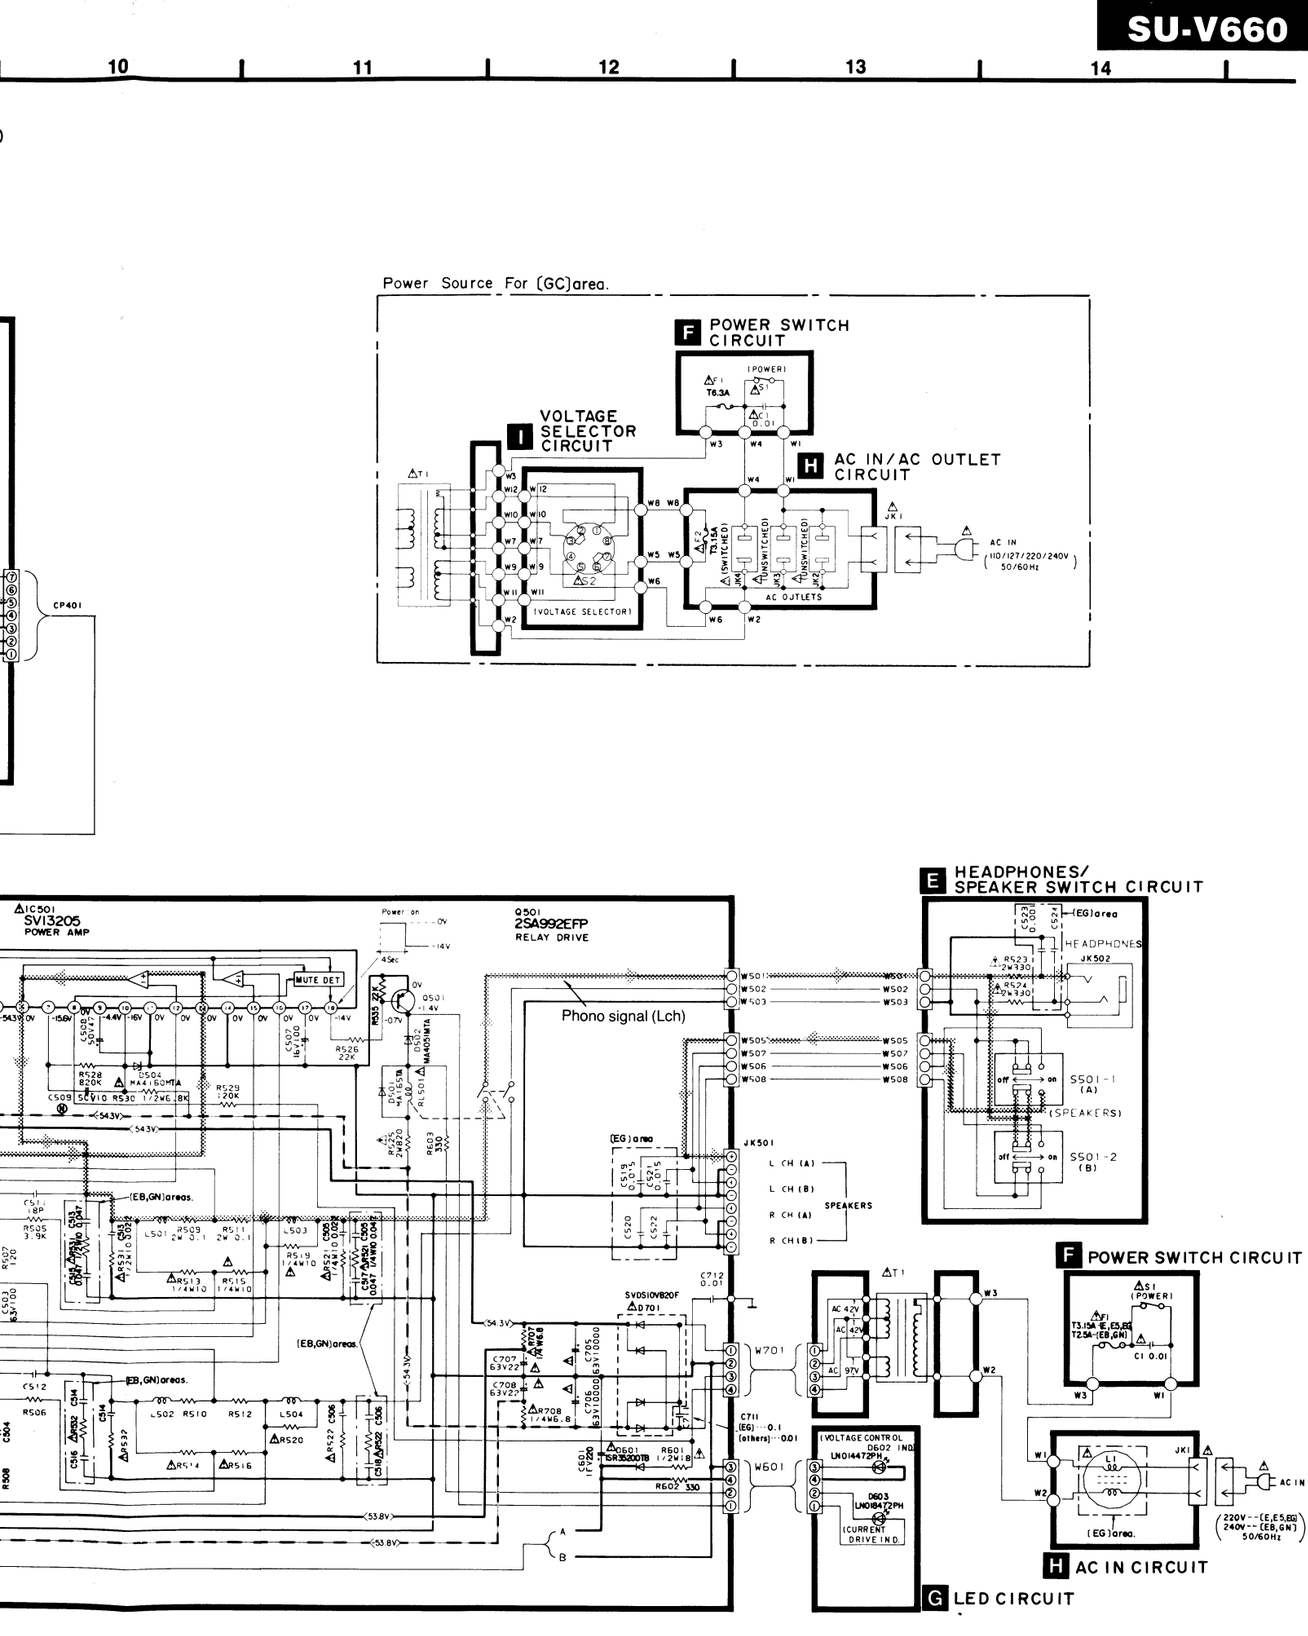

■ MEASUREMENTS AND ADJUSTMENTS

Control positions and equipment used.

- Volume knob.....∞ (Minimum)
- Main speaker selector.....off
- Remote speaker selector.....off
- Balance control knob 0

VOLTAGE CONTROL (V) AMP. IDLING (ICQ) ADJUSTMENT

1. Test equipment connection is shown in figure. (Connect the DC EVM on both channels.)
2. Completely turn the (V) amp. adjusting volumes (**VR451, VR452**) counter-clockwise.
3. Turn ON the set when it is cold, and 15 sec. later, adjust **VR451** and **VR452** so that the voltage is **25 mV**.
   Also, check that the voltage is **25~30 mV** (standard: **28 mV**) after lapse of **10–15 minutes**. (Below **30 mV** after lapse of **60 min.**)

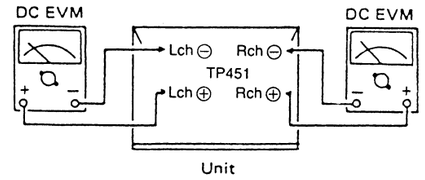

- Adjustment points

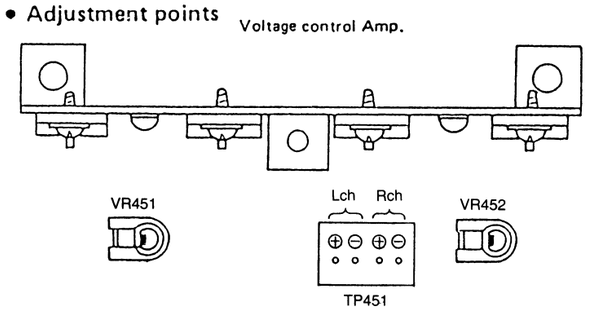

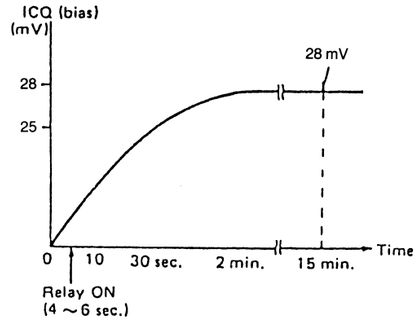

■ TERMINAL GUIDE OF IC'S, TRANSISTORS AND DIODES



UPC4570C	8 pin
AN7062N	18 pin
M5218P	8 pin

SVI3205 18 pin

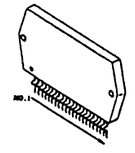

2SK170 2SA1123
2SC1685, 2SC2631
2SA992



2SC3311, 2SA1309



2SC3944, 2SA1535



MA4036, MA4160
MA4033.
MA4180

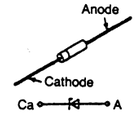

SVDS10VB20

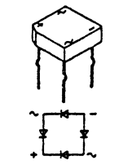

MA165, MA16 , MA4051
MA29, 1SR35200TB

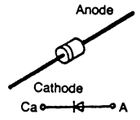

■ REPLACEMENT PARTS LIST

Notes: *Important safety notice:
Components identified by ⚠ mark have special characteristics important for safety. When replacing any of these components use only manufacturer's specified parts.
*The parenthesized indications in the Remarks columns specify the areas. (Refer to the first page for area.)
Parts without these indications can be used for all areas.

Ref. No.	Part No.	Part Name & Description	Remarks
		RESISTORS	
R101～104	ERDS2TJ102T	C. RESISTOR 1/4W 1K	(EG)
R105, 106	ERDS2TJ473T	C. RESISTOR 1/4W 47K	
R107, 108	ERDS2TJ221T	C. RESISTOR 1/4W 220	
R109, 110	ERDS2TJ220T	C. RESISTOR 1/4W 22	
R111～116	ERDAS3G332T	C. RESISTOR 1/4W 3.3K	
R117, 118	ERDS2TJ151T	C. RESISTOR 1/4W 150	
R119, 120	ERDS2TJ100T	C. RESISTOR 1/4W 10	
R121, 122	ERDS2TJ101T	C. RESISTOR 1/4W 100	
R123, 124	ERDS2TJ151T	C. RESISTOR 1/4W 150	
R125, 126	ERDS2TJ682T	C. RESISTOR 1/4W 6.8K	
R127, 128	ERDS2TJ823T	C. RESISTOR 1/4W 82K	
R129, 130	ERDS2TJ334T	C. RESISTOR 1/4W 330K	
R131, 132	ERDS2TJ561T	C. RESISTOR 1/4W 560	
R201, 202	ERDS2TJ102T	C. RESISTOR 1/4W 1K	(EG)
R203, 204	ERDAS3G102T	C. RESISTOR 1/4W 1K	(EG)
R205～210	ERDS2TJ102T	C. RESISTOR 1/4W 1K	(EG)
R211, 212	ERDAS3G223T	C. RESISTOR 1/4W 22K	
R213, 214	ERDS2TJ183T	C. RESISTOR 1/4W 18K	
R215, 216	ERDS2TJ332T	C. RESISTOR 1/4W 3.3K	
R217	ERDS2TJ824T	C. RESISTOR 1/4W 820K	
R219, 220	ERDAS3G272T	C. RESISTOR 1/4W 2.7K	
R221～224	ERDS2TJ471T	C. RESISTOR 1/4W 470	(EG)
R225, 226	ERDS2TJ102T	C. RESISTOR 1/4W 1K	(EG)
R231, 232	ERDAS3G472T	C. RESISTOR 1/4W 4.7K	
R233, 234	ERDAS3G124T	C. RESISTOR 1/4W 120K	
R251, R252	ERDAS3G102T	C. RESISTOR 1/4W 1K	(EG)
R301, 302	ERDAS3G561T	C. RESISTOR 1/4W 560	
R303, 304	ERDS2TJ823T	C. RESISTOR 1/4W 82K	
R305, 306	ERDS2TJ224T	C. RESISTOR 1/4W 220K	
R307, 308	ERDS2TJ392T	C. RESISTOR 1/4W 3.9K	
R309, 310	ERDS2TJ223T	C. RESISTOR 1/4W 22K	
R311, 312	ERDS2TJ102T	C. RESISTOR 1/4W 1K	
R313, 314	ERDS2TJ562T	C. RESISTOR 1/4W 5.6K	
R315, 316	ERDAS3G392T	C. RESISTOR 1/4W 3.9K	
R317, 318	ERDAS3G223T	C. RESISTOR 1/4W 22K	
R319, 320	ERDS2TJ183T	C. RESISTOR 1/4W 18K	
R401, 402	ERDS2TJ122T	C. RESISTOR 1/4W 1.2K	
R403, 404	ERDS2TJ823T	C. RESISTOR 1/4W 82K	
R405, 406	ERDAS3G272T	C. RESISTOR 1/4W 2.7K	
R407, 408	ERDAS3G823T	C. RESISTOR 1/4W 82K	
R409, 410	ERDS2TJ561T	C. RESISTOR 1/4W 560	
R411, 412	ERD25FVJ470T	C. RESISTOR 1/4W 47	⚠
R437	ERDS2TJ473T	C. RESISTOR 1/4W 47K	⚠
R438	ERDS1FVJ682T	C. RESISTOR 1/2W 6.8K	⚠
R439	ERD25FVJ470T	C. RESISTOR 1/4W 47	⚠
R451, 452	ERDS2TJ182T	C. RESISTOR 1/4W 1.8K	
R453, 454	ERDS2TJ393T	C. RESISTOR 1/4W 39K	
R455, 456	ERDS2TJ391T	C. RESISTOR 1/4W 390	
R457, 458	ERDS2TJ823T	C. RESISTOR 1/4W 82K	⚠
R459, 460	ERD25FVJ101T	C. RESISTOR 1/4W 100	⚠
R461～464	ERDS2TJ223T	C. RESISTOR 1/4W 22K	⚠
R465～468	ERD25FVJ101T	C. RESISTOR 1/4W 100	⚠
R469, 470	ERD25FVJ821T	C. RESISTOR 1/4W 820	⚠
R471～474	ERD25FVJ2R2T	C. RESISTOR 1/4W 2.2	⚠
R501, 502	ERDS2TJ362T	C. RESISTOR 1/4W 3.6K	
R503, 504	ERDS2TJ121T	C. RESISTOR 1/4W 120	
R505, 506	ERDS2TJ392T	C. RESISTOR 1/4W 3.9K	
R507, 508	ERDS2TJ121T	C. RESISTOR 1/4W 120	
R509～512	RREEMKR10SC	C. RESISTOR 2W 0.1	
R513～516	ERD25FVJ100T	C. RESISTOR 1/4W 10	⚠
R517, 518	ERD25FVJ1R0T	C. RESISTOR 1/4W 1.0	⚠
R519～522	ERD25FVJ100T	C. RESISTOR 1/4W 10	⚠
R523, 524	ERG2SJ331H	M. RESISTOR 2W 330	⚠
R525	ERG2SJ821H	M. RESISTOR 2W 820	⚠
R526, 527	ERDS2TJ223T	C. RESISTOR 1/4W 22K	
R528	ERDS2TJ824T	C. RESISTOR 1/4W 820K	
R529	ERDS2TJ124T	C. RESISTOR 1/4W 120K	
R530	ERDS1FVJ682T	C. RESISTOR 1/2W 6.8K	⚠
R531, 532	ERDS1FVJ100T	C. RESISTOR 1/2W 10	⚠
R533, 534	ERDS2TJ182T	C. RESISTOR 1/4W 1.8K	
R535	ERDS2TJ223T	C. RESISTOR 1/4W 22K	
R601	ERDS1FVJ180T	C. RESISTOR 1/2W 18	⚠
R602, 603	ERDS2TJ331T	C. RESISTOR 1/4W 330	
R604	ERDS2TJ471T	C. RESISTOR 1/4W 470	
R707, 708	ERD25FVJ6R8T	C. RESISTOR 1/4W 6.8	⚠
R709, 710	ERD25FVJ470T	C. RESISTOR 1/4W 47	⚠
R711, 712	ERD25FVJ331T	C. RESISTOR 1/4W 330	⚠
R751, 752	ERDS2TJ223T	C. RESISTOR 1/4W 22K	
R753	ERDS2TJ102T	C. RESISTOR 1/4W 1K	
R754	ERDS2TJ153T	C. RESISTOR 1/4W 15K	
R755	ERDS2TJ823T	C. RESISTOR 1/4W 82K	
R756	ERDS2TJ153T	C. RESISTOR 1/4W 15K	
R757, 758	ERDS2TJ102T	C. RESISTOR 1/4W 1K	
		CAPACITORS	
C1	ECKWNS103ZVS	C. CAPACITOR 250V 0.01U	⚠
C11, 12	ECBT1H102KB5	C. CAPACITOR 50V 0.001U	
C101, 102	RCBS1H120JLY	C. CAPACITOR 50V 12P	(EG)
C103, 104	ECKT1H103ZF	C. CAPACITOR 50V 0.01U	
C105, 106	RCBS1H820KBY	C. CAPACITOR 50V 82P	
C107, 108	ECEA0JU222E	E. CAPACITOR 6.3V 2200U	
C109, 110	ECQM1H222KV	P. CAPACITOR 50V 2200P	
C111, 112	ECQM1H122KV3	P. CAPACITOR 50V 1200P	
C113, 114	ECQM1H103KV3	P. CAPACITOR 50V 0.01U	
C115, 116	ECQV1H393JZ3	P. CAPACITOR 50V 0.039U	
C117, 118	UES1H010M1TA	E. CAPACITOR 50V 1U	
C119, 120	ECQM1H472KV3	P. CAPACITOR 50V 4700P	
C121, 122	ECEA1EK4R7B	E. CAPACITOR 25V 4.7U	
C123, 124	RCBS1H270JLY	C. CAPACITOR 50V 27P	(EG)
C201～210	RCBS1H101KBY	C. CAPACITOR 50V 100P	(EG)
C213, 214	ECQV1H563JZ3	P. CAPACITOR 50V 0.056U	
C221～224	RCBS1H181KBY	C. CAPACITOR 50V 180P	(EG)
C225, 226	RCBS1H101KBY	C. CAPACITOR 50V 100P	(EG)
C301, 302	ECEA1HPX3R3B	E. CAPACITOR 50V 3.3U	
C303, 304	RCBS1H101KBY	C. CAPACITOR 50V 100P	
C305, 306	RCBS1H820KBY	C. CAPACITOR 50V 82P	
C307, 308	ECEA1HPX4R7B	E. CAPACITOR 50V 4.7U	
C309, 310	RCBS1H390JLY	C. CAPACITOR 50V 39P	
C311, 312	ECEA1CPX100B	E. CAPACITOR 16V 10U	
C313, 314	ECQV1H823JZ3	P. CAPACITOR 50V 0.082U	
C315, 316	ECQM1H153KV3	P. CAPACITOR 50V 0.015U	
C317, 318	ECQM1H183JV3	P. CAPACITOR 50V 0.018U	
C319, 320	ECQM1H182JV	P. CAPACITOR 50V 1800P	
C321, 322	ECKT1H103ZF	C. CAPACITOR 50V 0.01U	
C401, 402	ECEA1HPX3R3B	E. CAPACITOR 50V 3.3U	
C403, 404	RCBS1H271KBY	C. CAPACITOR 50V 270P	
C405, 406	ECEA1CPX220B	E. CAPACITOR 16V 22U	
C407, 408	RCBS1H820KBY	C. CAPACITOR 50V 82P	
C409, 410	RCBS1H100JLY	C. CAPACITOR 50V 10P	
C411, 412	ECBT1H681KB5	C. CAPACITOR 50V 680P	
C413, 414	ECCT2H070D	C. CAPACITOR 500V 7P	
C415, 416	ECBT1H102KB5	C. CAPACITOR 50V 0.001U	⚠
C417, 418	ECBT1H102KB5	C. CAPACITOR 50V 0.001U	
C427, 428	ECKT1H223ZF	C. CAPACITOR 50V 0.022U	
C429	ECEA1JU220	E. CAPACITOR 63V 22U	⚠
C451, 452	ECKT1H333ZF	C. CAPACITOR 50V 0.033U	
C453～456	ECCT2H680K	C. CAPACITOR 500V 68P	⚠
C457～460	ECEA1HK010B	E. CAPACITOR 50V 1U	
C501～504	ECEA0JPX101B	E. CAPACITOR 6.3V 100U	
C505, 506	ECKT1H223ZF	C. CAPACITOR 50V 0.022U	(E, E5, EG, GN, GC)
C505, 506	ECKT1H473ZF	C. CAPACITOR 50V 0.047U	(EB, GN)
C507	ECEA1CU101B	E. CAPACITOR 16V 100U	
C508	ECEA1HU470B	E. CAPACITOR 50V 47U	
C509	ECEA1HN100S	E. CAPACITOR 50V 10U	
C511, 512	RCBS1H180JLY	C. CAPACITOR 50V 18P	
C513, 514	ECKT1H223ZF	C. CAPACITOR 50V 0.022U	(E, E5, EG, GN, GC)
C513, 514	ECKT1H473ZF	C. CAPACITOR 50V 0.047U	(EB, GN)
C515～518	ECKT1H473ZF	C. CAPACITOR 50V 0.047U	(EB, GN)
C519～522	ECQM1H153KV3	P. CAPACITOR 50V 0.015U	(EG)
C523, 524	ECBT1H102KB5	C. CAPACITOR 50V 0.001U	(EG)
C525, 526	ECQB1H272JZ3	P. CAPACITOR 50V 2700P	
C601	ECEA1CU221B	E. CAPACITOR 16V 220U	
C705, 706	ECET1JV103LY	E. CAPACITOR 63V 0.01U	⚠
C707, 708	ECEA1JU220	E. CAPACITOR 63V 22U	⚠
C709, 710	ECEA1JU220	E. CAPACITOR 63V 22U	
C711	ECKR2H103ZU	C. CAPACITOR 500V 0.01U	(E, E5, EB, GN, GC)
C711	ECQE2104KS	P. CAPACITOR 250V 0.1U	(EG)
C712	ECKR2H103ZU	C. CAPACITOR 500V 0.01U	
C751～753	ECEA1EPX100B	E. CAPACITOR 25V 10U	
C754, 755	ECEA1HPX3R3B	E. CAPACITOR 50V 3.3U	
C756	ECBT1H821KB5	C. CAPACITOR 50V 820P	
C757, 758	ECKT1H103ZF	C. CAPACITOR 50V 0.01U	

cturer's

arks

Ref. No.	Part No.	Part Name & Description	Remarks
C107, 108	ECEA0JU222E	E. CAPACITOR 6.3V 2200U	
C109, 110	ECQM1H222KV	P. CAPACITOR 50V 2200P	
C111, 112	ECQM1H122KV3	P. CAPACITOR 50V 1200P	
C113, 114	ECQM1H103KV3	P. CAPACITOR 50V 0.01U	
C115, 116	ECQV1H393JZ3	P. CAPACITOR 50V 0.039U	
C117, 118	UES1HD10M1TA	E. CAPACITOR 50V 1U	
C119, 120	ECQM1H472KV3	P. CAPACITOR 50V 4700P	
C121, 122	ECEA1EK4R7B	E. CAPACITOR 25V 4.7U	
C123, 124	RCBS1H270JLY	C. CAPACITOR 50V 27P	(EG)
C201~210	RCBS1H101KBY	C. CAPACITOR 50V 100P	(EG)
C213, 214	ECQV1H563JZ3	P. CAPACITOR 50V 0.056U	
C221~224	RCBS1H181KBY	C. CAPACITOR 50V 180P	(EG)
C225, 226	RCBS1H101KBY	C. CAPACITOR 50V 100P	(EG)
C301, 302	ECEA1HPX3R3B	E. CAPACITOR 50V 3.3U	
C303, 304	RCBS1H101KBY	C. CAPACITOR 50V 100P	
C305, 306	RCBS1H820KBY	C. CAPACITOR 50V 82P	
C307, 308	ECEA1HPX4R7B	E. CAPACITOR 50V 4.7U	
C309, 310	RCBS1H390JLY	C. CAPACITOR 50V 39P	
C311, 312	ECEA1CPX100B	E. CAPACITOR 16V 10U	
C313, 314	ECQV1H823JZ3	P. CAPACITOR 50V 0.082U	
C315, 316	ECQM1H153KV3	P. CAPACITOR 50V 0.015U	
C317, 318	ECQM1H183JV3	P. CAPACITOR 50V 0.018U	
C319, 320	ECQM1H182JV	P. CAPACITOR 50V 1800P	
C321, 322	ECKT1H1033F	C. CAPACITOR 50V 0.01U	
C401, 402	ECEA1HPX3R3B	E. CAPACITOR 50V 3.3U	
C403, 404	RCBS1H271KBY	C. CAPACITOR 50V 270P	
C405, 406	ECEA1CPX220B	E. CAPACITOR 16V 22U	
C407, 408	RCBS1H820KBY	C. CAPACITOR 50V 82P	
C409, 410	RCBS1H100JLY	C. CAPACITOR 50V 10P	
C411, 412	ECBT1H681KB5	C. CAPACITOR 50V 680P	
C413, 414	ECCT2H07CD	C. CAPACITOR 500V 7P	
C415, 416	ECBT1H102KB5	C. CAPACITOR 50V 0.001U	⚠
C417, 418	ECBT1H102KB5	C. CAPACITOR 50V 0.001U	
C427, 428	ECKT1H2232F	C. CAPACITOR 50V 0.022U	
C429	ECEA1JU220	E. CAPACITOR 63V 22U	⚠
C451, 452	ECKT1H3332F	C. CAPACITOR 50V 0.033U	
C453~456	ECCT2H680K	C. CAPACITOR 500V 68P	⚠
C457~460	ECEA1HK010B	E. CAPACITOR 50V 1U	
C501~504	ECEA0JPX101B	E. CAPACITOR 6.3V 100U	
C505, 506	ECKT1H2232F	C. CAPACITOR 50V 0.022U	(E, E5, EG, GN, GC)
C505, 506	ECKT1H4732F	C. CAPACITOR 50V 0.047U	(EB, GN)
C507	ECEA1CU101B	E. CAPACITOR 16V 100U	
C508	ECEA1HU470B	E. CAPACITOR 50V 47U	
C509	ECEA1HN100S	E. CAPACITOR 50V 10U	
C511, 512	RCBS1H180JLY	C. CAPACITOR 50V 18P	
C513, 514	ECKT1H223ZF	C. CAPACITOR 50V 0.022U	(E, E5, EG, GN, GC)
C513, 514	ECKT1H473ZF	C. CAPACITOR 50V 0.047U	(EB, GN)
C515~518	ECKT1H473ZF	C. CAPACITOR 50V 0.047U	(EB, GN)
C519~522	ECQM1H153KV3	P. CAPACITOR 50V 0.015U	(EG)
C523, 524	ECBT1H102KB5	C. CAPACITOR 50V 0.001U	(EG)
C525, 526	ECQB1H272JZ3	P. CAPACITOR 50V 2700P	
C601	ECEA1CU221B	E. CAPACITOR 16V 220U	

Ref. No.	Part No.	Part Name & Description	Remarks
C705, 706	ECET1JV103LY	E. CAPACITOR 63V 0.01U	⚠
C707, 708	ECEA1JU220	E. CAPACITOR 63V 22U	⚠
C709, 710	ECEA1JU220	E. CAPACITOR 63V 22U	
C711	ECKR2H103ZU	C. CAPACITOR 500V 0.01U	(E, E5, EB, GN, GC)
C711	ECQE2104KS	P. CAPACITOR 250V 0.1U	(EG)
C712	ECKR2H103ZU	C. CAPACITOR 500V 0.01U	
C751~753	ECEA1EPX100B	E. CAPACITOR 25V 10U	
C754, 755	ECEA1HPX3R3B	E. CAPACITOR 50V 3.3U	
C756	ECBT1H821KB5	C. CAPACITOR 50V 820P	
C757, 758	ECKT1H103ZF	C. CAPACITOR 50V 0.01U	

Ref. No.	Part No.	Part Name & Description	Remarks
		INTEGRATED CIRCUITS	
IC101	UPC4570C	IC, PHONO/EQ AMP.	
IC301	UPC4570C	IC, TONE AMP.	
IC401	AN7062N	IC, VOLTAGE AMP.	⚠
IC501	SVI3205	IC, POWER AMP.	⚠
IC751	M5218P	IC, ACTIVE SERVO	
		TRANSISTORS	
Q101~104	2SK170BL	TRANSISTOR	
Q401, 402	2SA1123RST	TRANSISTOR	
Q451, 452	2SC2631RST	TRANSISTOR	⚠
Q453, 454	2SC3311AQSTA	TRANSISTOR	
Q455, 456	2SA1309AQSTA	TRANSISTOR	
Q457, 458	2SC2631RST	TRANSISTOR	⚠
Q459, 460	2SA1123RST	TRANSISTOR	⚠
Q461, 462	2SC3944AQRS	TRANSISTOR	⚠
Q463, 464	2SA1535AQRS	TRANSISTOR	⚠
Q465, 466	2SC1685NCQRS	TRANSISTOR	
Q501	2SA992EFP	TRANSISTOR	
Q751	2SC3944AQRS	TRANSISTOR	
Q752	2SA1535AQRS	TRANSISTOR	
		DIODES	
D101, 102	MA165TA	DIODE	
D401, 402	MA167ATA	DIODE	
D403, 404	MA4036MTA	DIODE	⚠
D428	MA4160MTA	DIODE	
D451, 452	MA29WATA	DIODE	⚠
D453~456	MA165TA	DIODE	
D501	MA165TA	DIODE	
D502	MA4051MTA	DIODE	
D503	MA4160MTA	DIODE	⚠
D504	MA4160MTA	DIODE	
D601	1SR35200TB	DIODE	⚠
D602	LN014472PH	DIODE	
D603	LN018472PH	DIODE	
D604	LN018304P	DIODE	
D605	MA4033MTA	DIODE	
D701	SVDS10VB20F	DIODE	⚠
D751, 752	MA4180MTA	DIODE	
D753	MA165TA	DIODE	
		VARIABLE RESISTORS	
VR201	RRV16J01A	V. R, VOLUME CONTROL	
VR202	EWHFDA014G15	V. R, BALANCE	
VR301	EWC2XA000C15	V. R, BASS	
VR302	EWC2XA000C15	V. R, TREBLE	

Ref. No.	Part No.	Part Name & Description	Remarks
VR451	EVNDXAA00B52	V. R, ICQ ADJ. (Lch)	
VR452	EVNDXAA00B52	V. R, ICQ ADJ. (Rch)	
		THERMISTOR	
TH201, 202	ERTD2ZHL104T	THERMISTOR	
TH451, 452	ERTD2ZHL104T	THERMISTOR	
		COILS	
L1	SLQZ650MH49	COIL	⚠ (EG)
L101, 102	SLM1Z33	COIL	(EG)
L501~504	SLQY18G-10	COIL	
		TRANSFORMERS	
T1	RTP1Q5E001-W	POWER TRANSFORMER	⚠ (E, E5, EG)
T1	RTP1Q5B001-W	POWER TRANSFORMER	⚠ (EB, GN)
T1	RTP1Q5E002-W	POWER TRANSFORMER	⚠ (GC)
		FUSES	
F1	XBA2C31TB0	FUSE 250V T3.15A	⚠ (E, E5, EG)
F1	XBA2C25TB0	FUSE 250V T2.5A	⚠ (EB, GN)
F1	XBA2C63TB0	FUSE 250V T6.3A	⚠ (GC)
F2	XBA2C31TB0	FUSE 250V T3.15A	⚠ (GC)
		SWITCHES	
S1	ESB8249V	SW, POWER	⚠ (E, E5, EG, EB, GN)
S1	ESB8279V	SW, POWER	⚠ (GC)
S2	ESE37263	SW, VOLTAGESELECTOR	⚠ (GC)
S101	RSR6B001	SW, INPUT SELECTOR	
S102	RSS6D001	SW, REC SELECTOR	
S103	ESB68106	SW, MODE/LOUDNESS/PHONO	
S301	ESB68109	SW, TONE CONTROL	
S302	ESB68107	SW, POWER AMP DIRECT	
S501	RSP2002	SW, SPEAKER SELECTOR	
		JACKS	
CN101	SJT3321	CONNECTOR(3P)	
CN102	SJT3321	CONNECTOR(3P)	
CN103	SJS51080WL	SOCKET(10P)	
CN104	SJS50880WL	SOCKET(8P)	
CN105	SJS50680WL	SOCKET(6P)	
CN201	SJS51080WL	SOCKET(10P)	
CN401	SJS50780WL	SOCKET(7P)	
CN602	SJT3215	CONNECTOR(2P)	
CP103	SJT31047WL	CONNECTOR(10P)	
CP104	SJT30847WL	CONNECTOR(8P)	
CP105	SJT30647WL	CONNECTOR(6P)	

Ref. No.	Part No.	Part Name & Description	Remarks
CP201	SJT31047WL	CONNECTOR (10P)	
CP401	SJT30747WL	CONNECTOR (7P)	
JK1	SJS9231-1B	AC INLET	⚠ (E, E5, EG, EB, GC)
JK1	SJS9234B	AC INLET	⚠ (GN)
JK2～4	SJS9233B	AC OUTLET	⚠ (GC)
JK101	SJF3067NJ	TERMINAL	
JK102	SJF3069N	TERMINAL	
JK103	SJF3069N	TERMINAL	
JK104	SJF3069N	TERMINAL	
JK105	SJF3068NJ	TERMINAL	
JK501	SJF4819	TERMINAL, SPEAKER	
JK502	SJJD19	HEADPHONES JACK	

Ref. No.	Part No.	Part Name & Description	Remarks
		FUSE HOLDERS	
FC1, 2	SJT390	FUSE HOLDER	⚠
FC3, 4	SJT388	FUSE HOLDER	⚠ (GC)
		RELAY	
RL501	SSY126	RELAY	⚠

Ref. No.	Part No.	Part Name & Description	Remarks
		CABINET PARTS	
1	RGW0002-2K	VOLUME KNOB	
2	RGW0029-K	INPUT SELECT KNOB	
2-1	SUS45-1	SPRING	
3	RGW0027-K	REC SELECT KNOB	
4	RGW0030-K	BALANCE/TONE KNOB	
5	RKM0041-K	CABINET	
6	SJPA11-1	SHORT PIN	
7	SNE2129-1	SCREW	
8	RGR0021A-A	REAR PANEL	(E)
8	RGR0053	REAR PANEL	(E5)
8	RGR0021A-C	REAR PANEL	(EB)
8	RGR0021A-B	REAR PANEL	(EG)
8	RGR0021B-A	REAR PANEL	(GC)
8	RGR0021A-D	REAR PANEL	(GN)
9	RGU0030	POWER BUTTON	
10	RGU0118-K	SPEAKER BUTTON	
11	RGU0119-K	DIRECT BUTTON	
12	RGU0120-K	SIGNAL BUTTON	
13	RKA0009-1	FOOT	
14	RMK0047	CHASSIS	
15	RYP0113	FRONT PANEL	
16	RSC0044	SHILD PLATE (R)	(E, E5, EG, GC, GN)
16	RSC0063	SHILD PLATE (R)	(EB)
17	RSC0045	SHILD PLATE (L)	
18	RSQ0004	REC SELECTOR	
19	XTB3+8J	SCREW	
20	SHE187-2	HOLDER	
21	SJS9231A	AC INLET COVER	(E, E5, EB, EG, GC)
21	SJS9234A	AC INLET COVER	(GN)
22	SNE4021-1	NUT	
23	XTBS3+8JFZ1	SCREW	
24	XTB3+16JFZ	SCREW	
25	XTB3+20JFZ	SCREW	
26	XTB3+6J	SCREW	

Ref. No.	Part No.	Part Name & Description	Remarks
27	XTB3+8JFZ	SCREW	
28	XTWS3+8T	SCREW	
29	RGK0097	ORNAMENT (GOLD LINE)	
30	RGK0109-K	SIDE ORNAMENT (L)	
31	RGK0108-K	SIDE ORNAMENT (R)	
32	RMR0144	HOLDER	
33	RMR0137-K	HOLDER	
34	RMQ0069-1	HEAT SINK COVER	(EB)
35	SHR415	LATCH	
36	XTW3+8T	SCREW	
37	RGK0158	VOLUME ORNAMENT	
38	RGK0156-K	INDICATOR ORNAMENT	
39	RMR0143	HOLDER	
41	SUS890	SPRING	(EG)
42	XYN3+C6FZ	SCREW	(GC)
43	SJS9233A	AC OUTLET COVER	(GC)
		PACKING MATERIAL	
P1	RPG0198	CARTON BOX	
P2	SPS5185	PAD	
P3	SPS5257-1	PAD	
P4	SPS5258-1	PAD	
		ACCESSORIES	
A1	RQF0193	INSTRUCTIONS MANUAL	(E, E5)
A1	RQT0138B	INSTRUCTIONS MANUAL	(EB, GN)
A1	RQT0138D	INSTRUCTIONS MANUAL	(EG)
A1	RQF0196	INSTRUCTIONS MANUAL	(GC)
A2	SFDAC05E03	POWER CORD	⚠ (E, E5, EG)
A2	SJA193	POWER CORD	⚠ (EB)
A2	RJA0004	POWER CORD	⚠ (GC)
A2	SJA173	POWER CORD	⚠ (GN)
A3	SJP9215	AC PLUG ADAPTOR	⚠ (GC)

■ EXPLODED VIEW

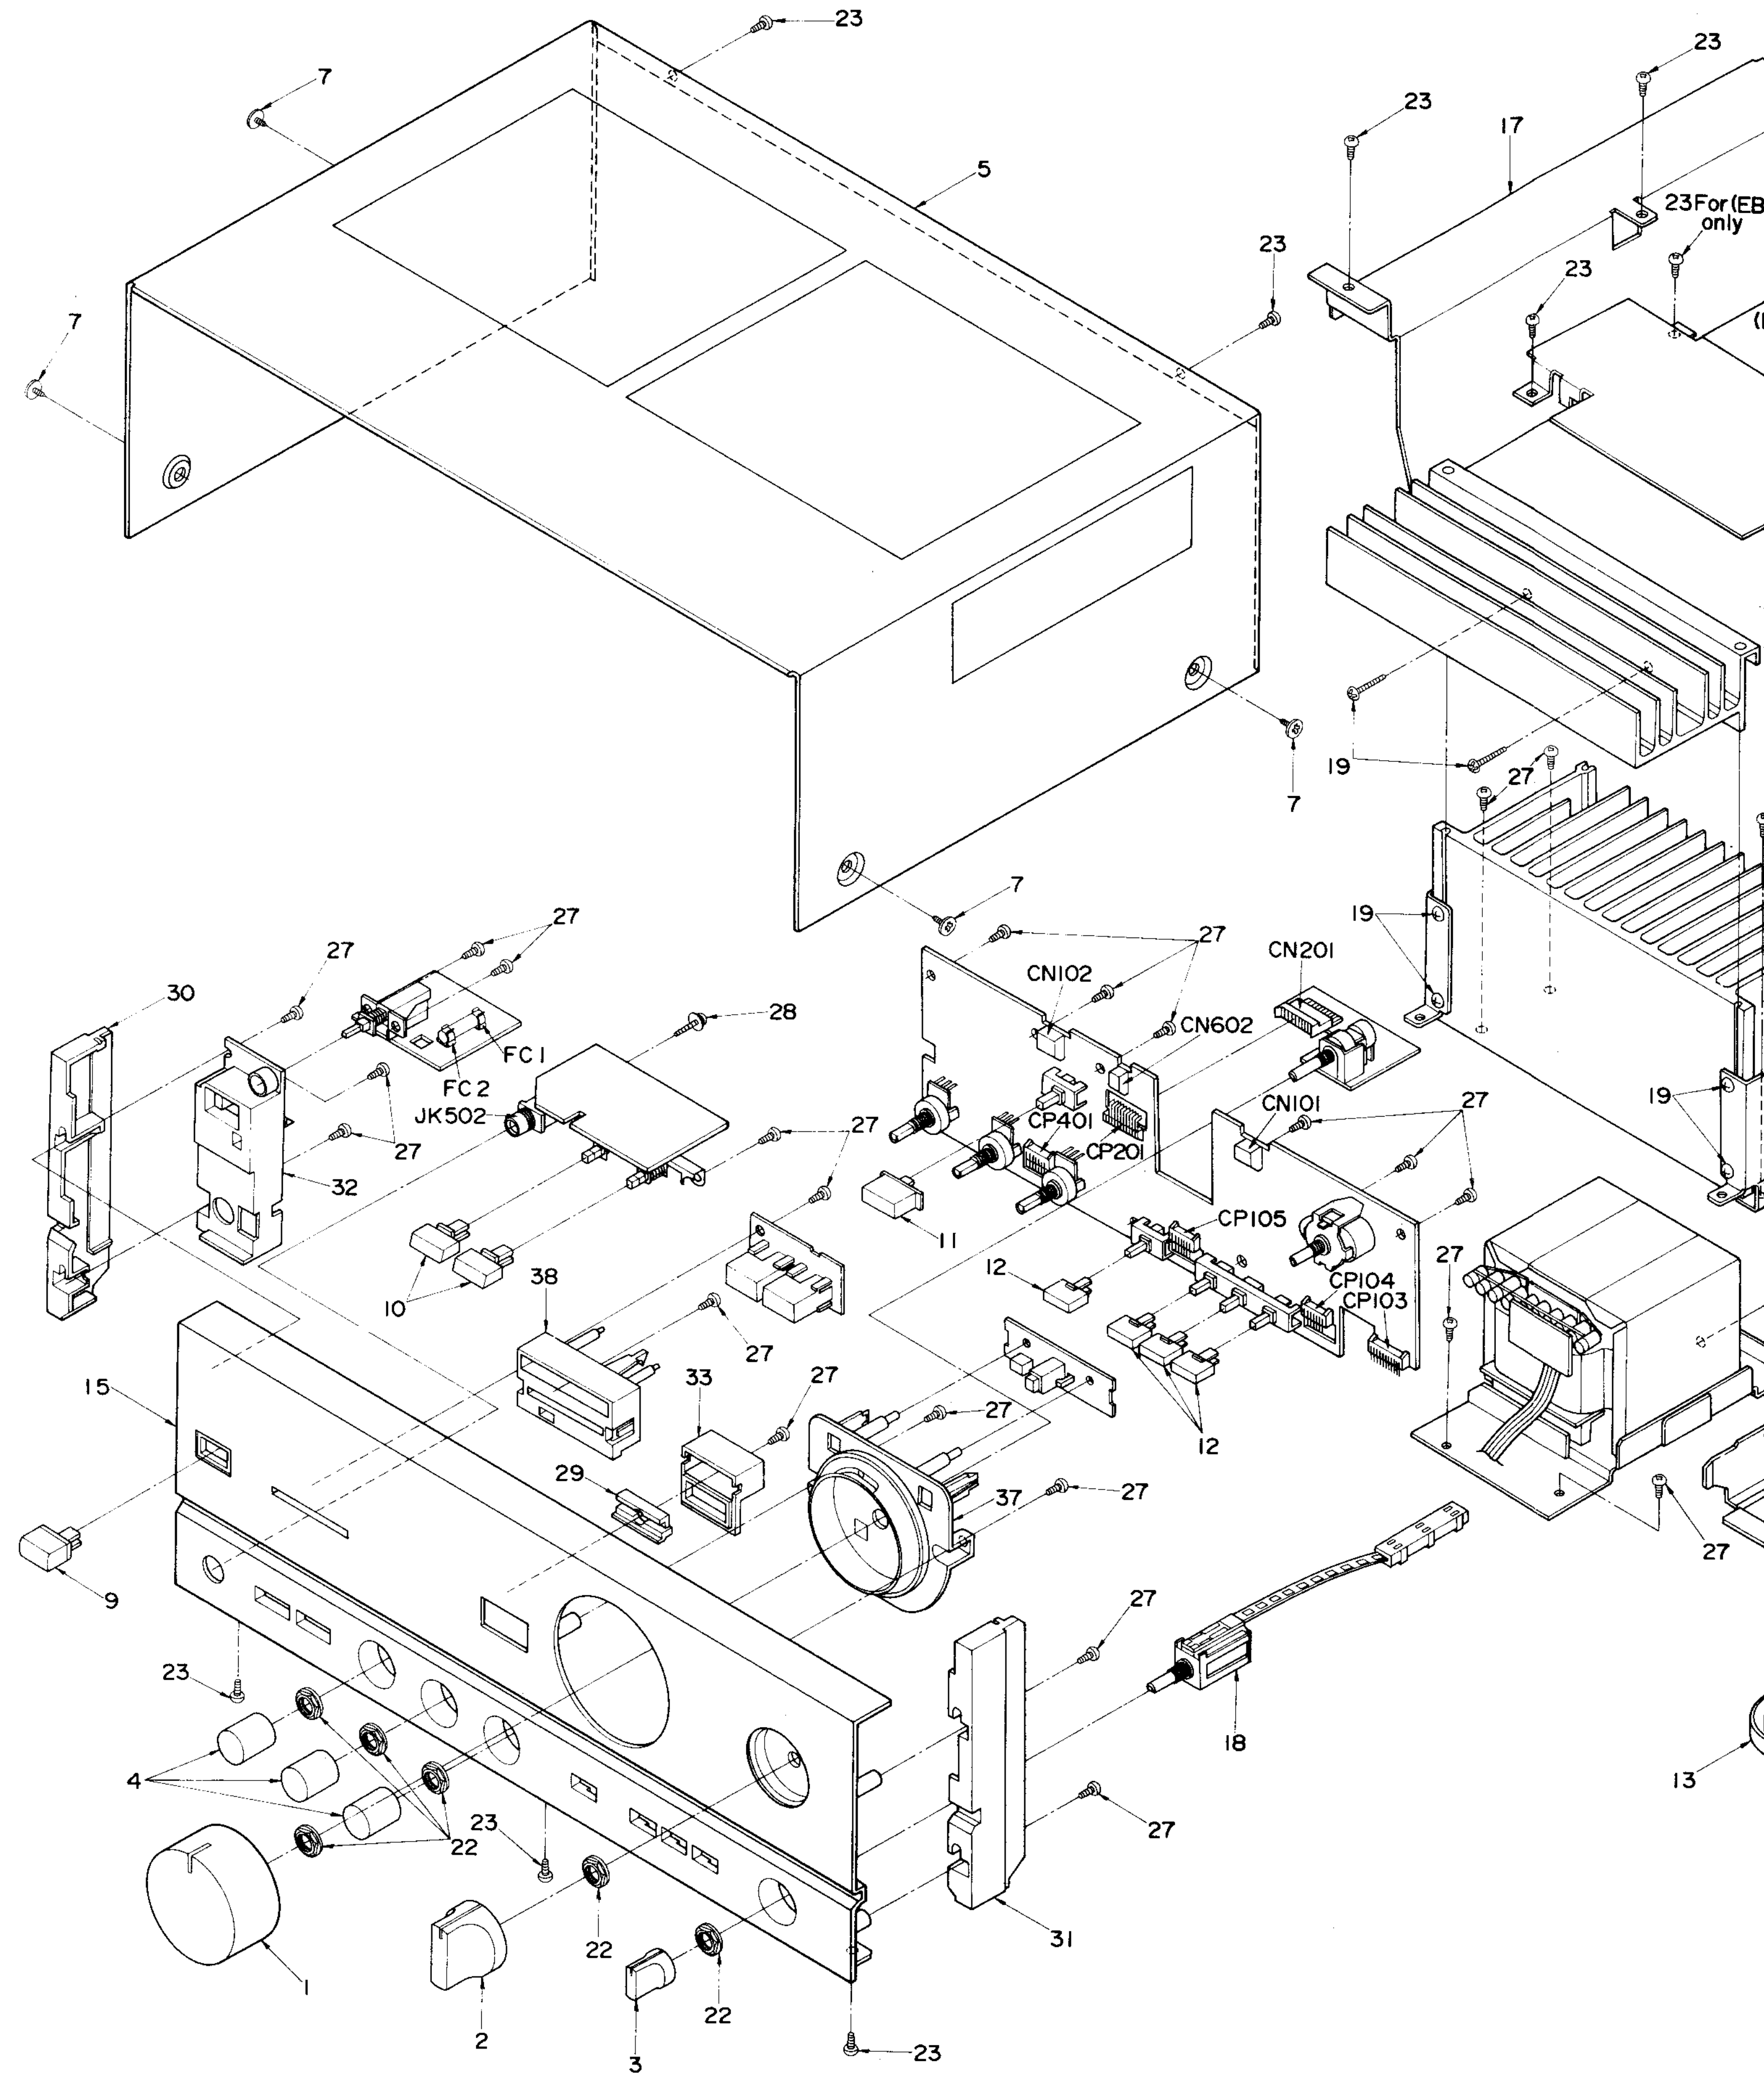

■ EXPLODED VIEW

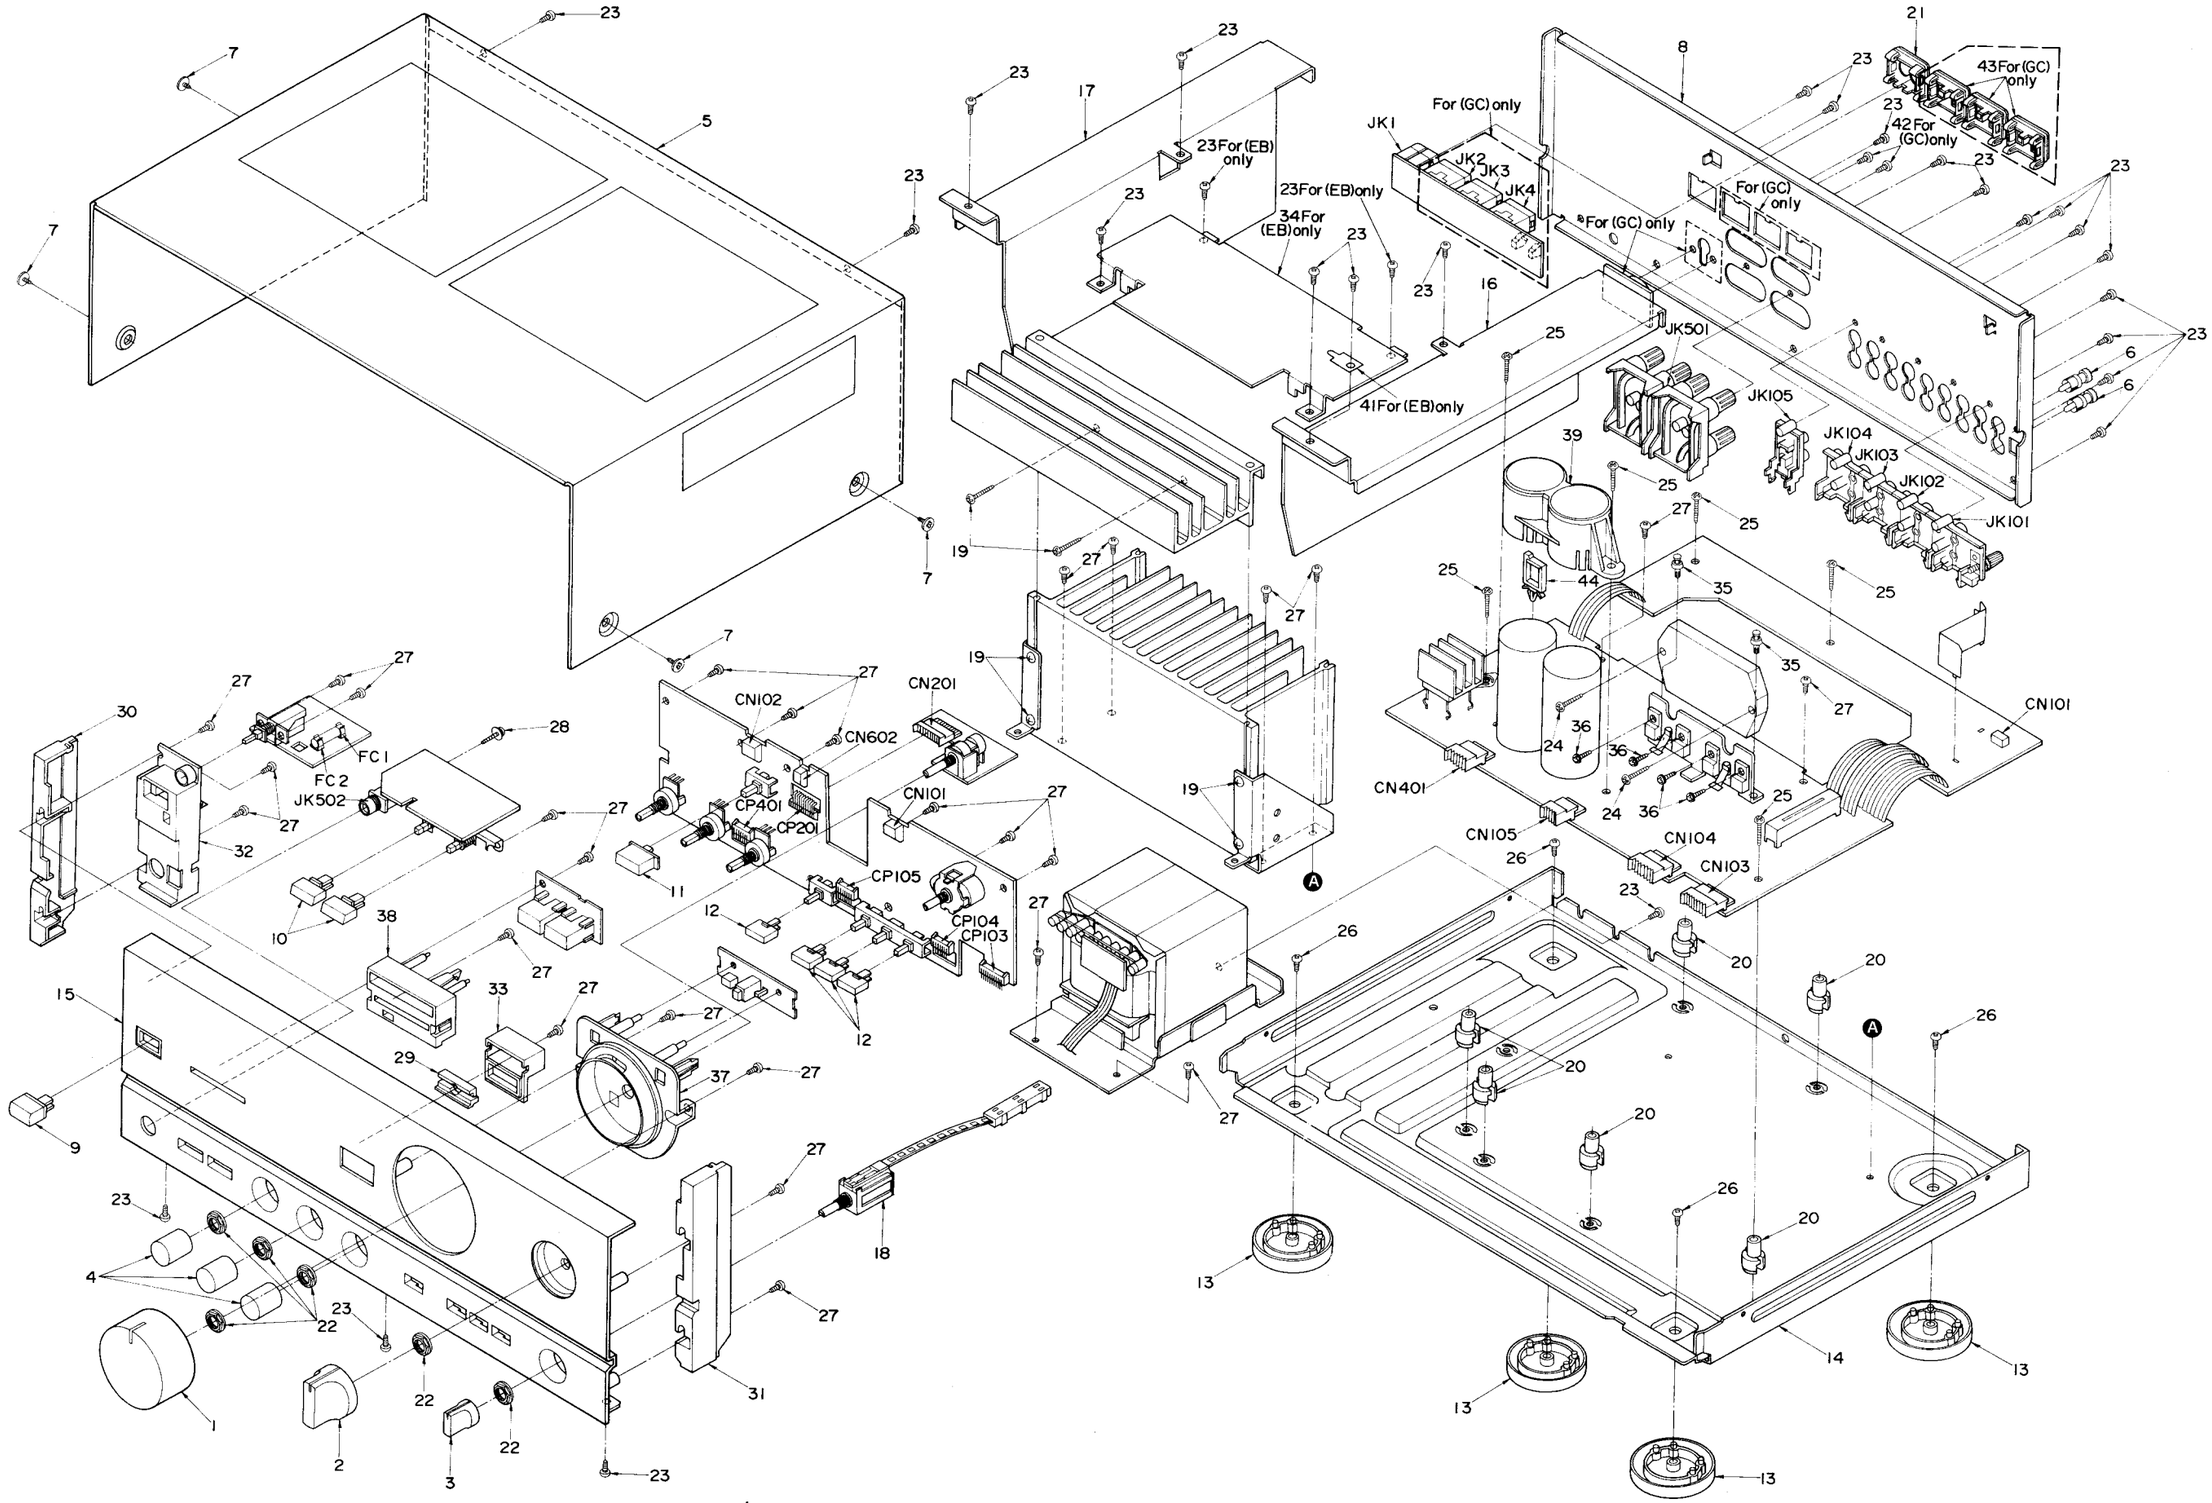

Printed in Japan
F880509700 TW/FF/YY